

MOUNTING INSTRUCTION




STRAW HOLDER FOR FARROWING BOX



ACO FUNKI A/S
Kirkevænget 5
DK-7400 Herning


Tel. +45 9711 9600
www.acofunki.com

Disassembled straw holder


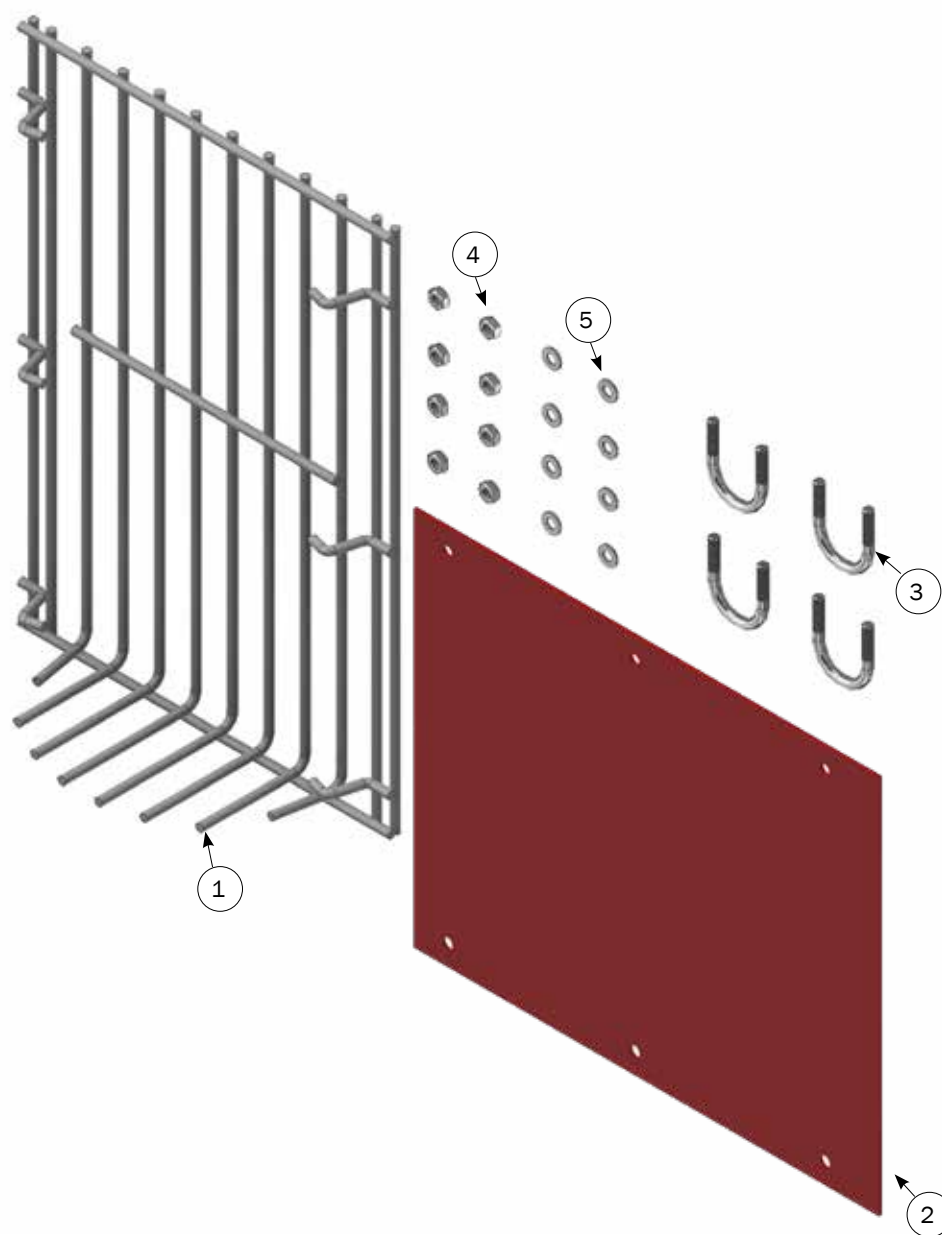


	Item no.	Description	Pcs.
	2900687	HAY RACK FOR FARROWING PENS	
1	2920687	GRILL FOR HAY RACK FARROWING PENS	1
2	8460558	HAY RACK COVER WITH HOLES	1
3	90100062	U-CLAMP 1" M8XH50 MM STAINLESS STEEL	4
4	33508013	NUT M8 A2 DIN 934 WAXED	8
5	35600037	FLAT WASHER Ø8.4X16X1.6 MM A2 DIN 125A	8


Assembly and installation on farrowing pen

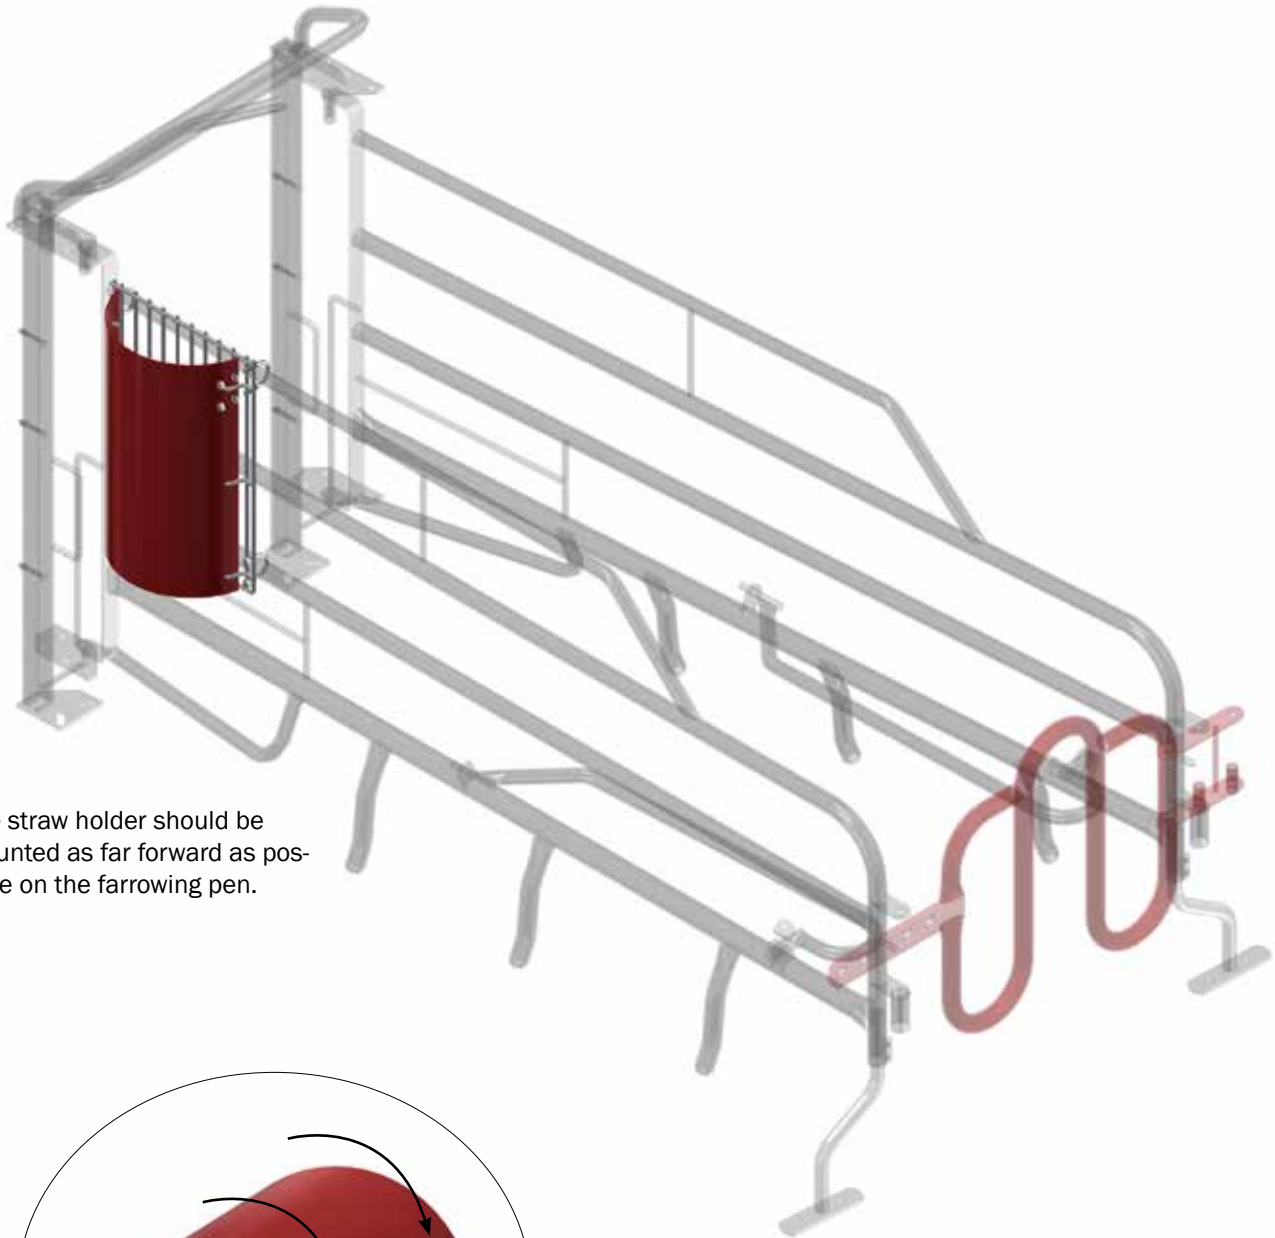


The straw holder should be mounted as far forward as possible on the farrowing pen.

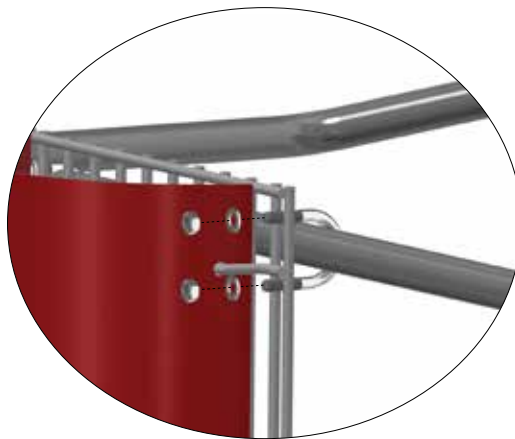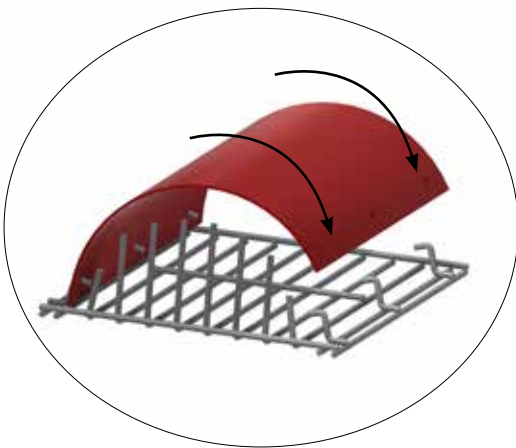


Straw holder on farrowing pen

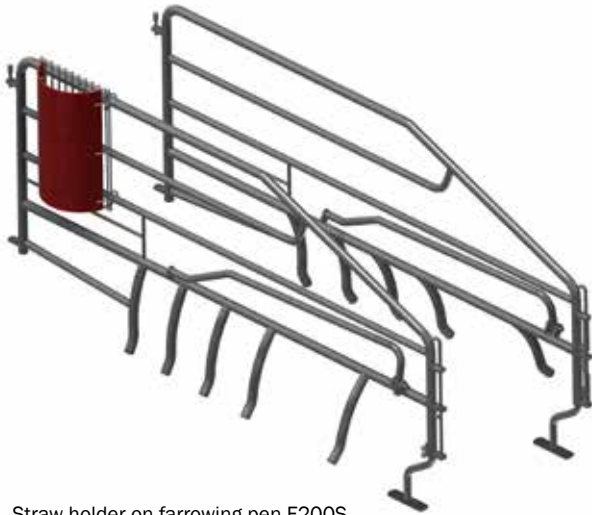


Straw holder on farrowing pen F200S.
Can be placed on either side.

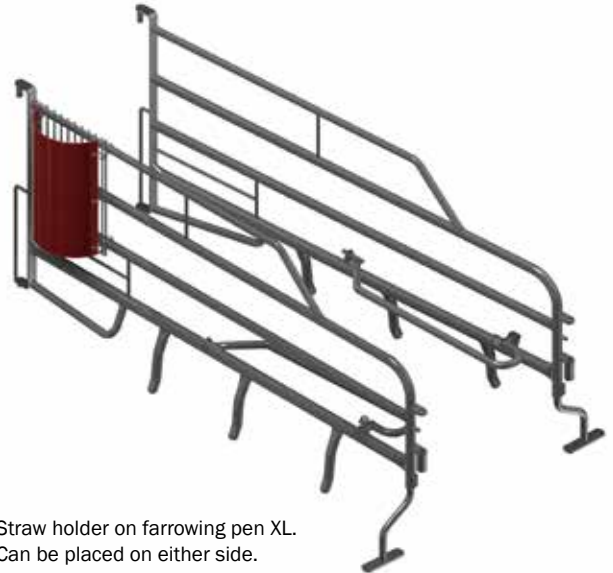

Straw holder on farrowing pen XL.
Can be placed on either side.

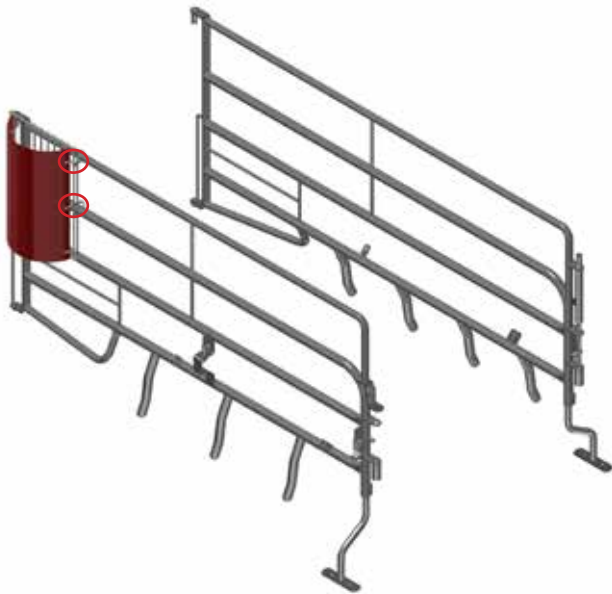

Straw holder on Welsafe farrowing pen.
Mounted on the first and second pipes in
the partition. Can also be mounted on the
second and fourth pipes. Can be placed on
both sides.

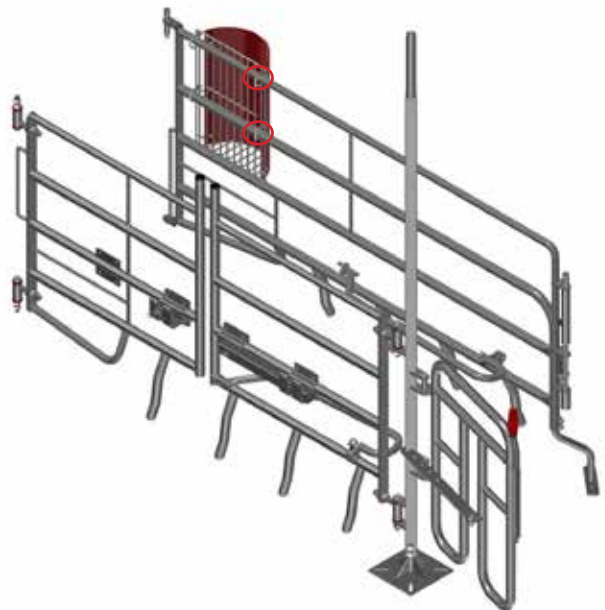

Straw holder on Farrow Comfort. Mounted on the
first and second pipes in the partition. Can also
be mounted on the second and fourth pipes. It is
installed on a solid partition that does not have an
opening function

