

# MOUNTING INSTRUCTION



## LIQUID FEEDING TANK

MIXING TANKS (2300, 4200, 6000, 8000, 9700 L)



**ACO FUNKI A/S**

Kirkevænget 5  
DK-7400 Herning

Tel. +45 9711 9600

Fax +45 9711 9677

[www.acofunki.com](http://www.acofunki.com)

**DANISH DESIGN | GERMAN QUALITY | GLOBAL EXPERIENCE**

## MOUNTING INSTRUCTION FOR MIXING TANK FOR LIQUID FEEDING

This mounting instruction contains information about how to assemble and install the residual tanks used for liquid feeding. Accessories for the tanks (e.g. acid evaporator, bacteria preventing UV-light and rotating high pressure cleaner) are described in separate instructions.

Mounting instructions for mixing tanks and water tanks are also found separately.

Mixing tanks, sizes .....	3
Overview of the tank .....	4
Manufacturer and product data .....	5
General safety instructions .....	5
Key to symbols .....	6
Declaration of conformity .....	6
Technical specifications .....	7
Mounting of load cells .....	8
Positioning of the tank .....	8
Levelling the tank .....	8
Mounting of outlet connection .....	9
Mounting of inspection cap .....	9
Mounting of steps inside the tank .....	9
Mounting of bottom counter agitator .....	10
Mounting of counter agitator .....	10
Assembling the fiberglass parts .....	11
Mounting the hatch .....	11
Placing the warning signs .....	12
Overview of the stirrer .....	13
Mounting of gear motor .....	14
Mounting of shaft for stirrer .....	14
Mounting of bottom agitator .....	15
Mounting of split bearing bush .....	16
Mounting of middle agitator .....	18
Pipe for connecting the pump .....	19
Pipe for intake of liquid components .....	19
Pipe for intake of dry components .....	19
Return pipes .....	20
Pipe for ventilation of the tank .....	20
Safety Switch .....	20
Internal washing of the tank, manually .....	21
Disassembly .....	21
Appendix: Service and maintenance of gear motor .....	22
Bill of materials .....	24

## MIXING TANKS - SIZES

### FUNKI LIQMIX

The mixing tanks for liquid feeding come in five sizes with a capacity of 2300 L - 9700 L.



Mixing tank 2300 L




Mixing tank 4200 L



Mixing tank 6000 L




Mixing tank 8000 L

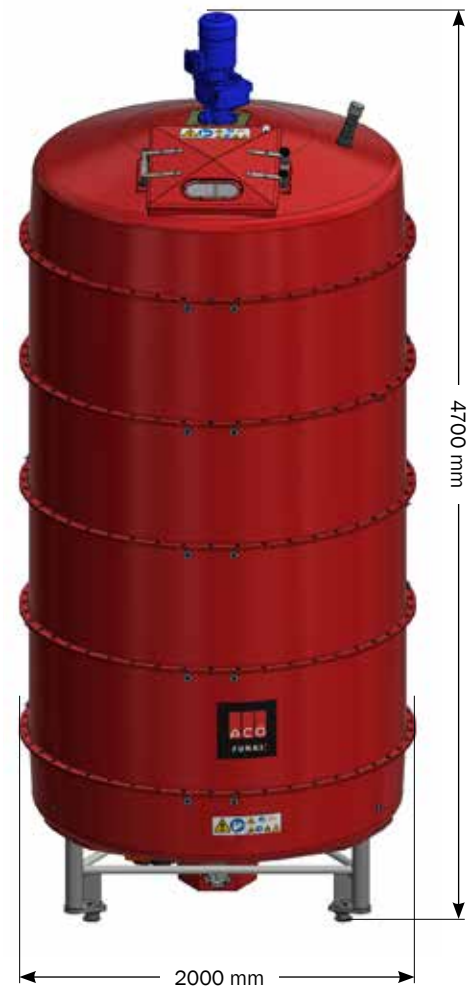

Mixing tank 9700 L

## OVERVIEW OF THE MIXING TANK

1. Stirrer and gear motor (see section about mounting the stirrer)
2. Ventilation
3. Hatch
4. Counter agitators
5. Steps
6. Bottom agitators
7. Feet
8. Inspection cap
9. Outlet connection and ball valve
10. Bottom part of the tank (for the fiberglass container)
11. Fiberglass container, rings (number of rings depends on the size of the tank (0-4 stk.))
12. Fiberglass container, top part

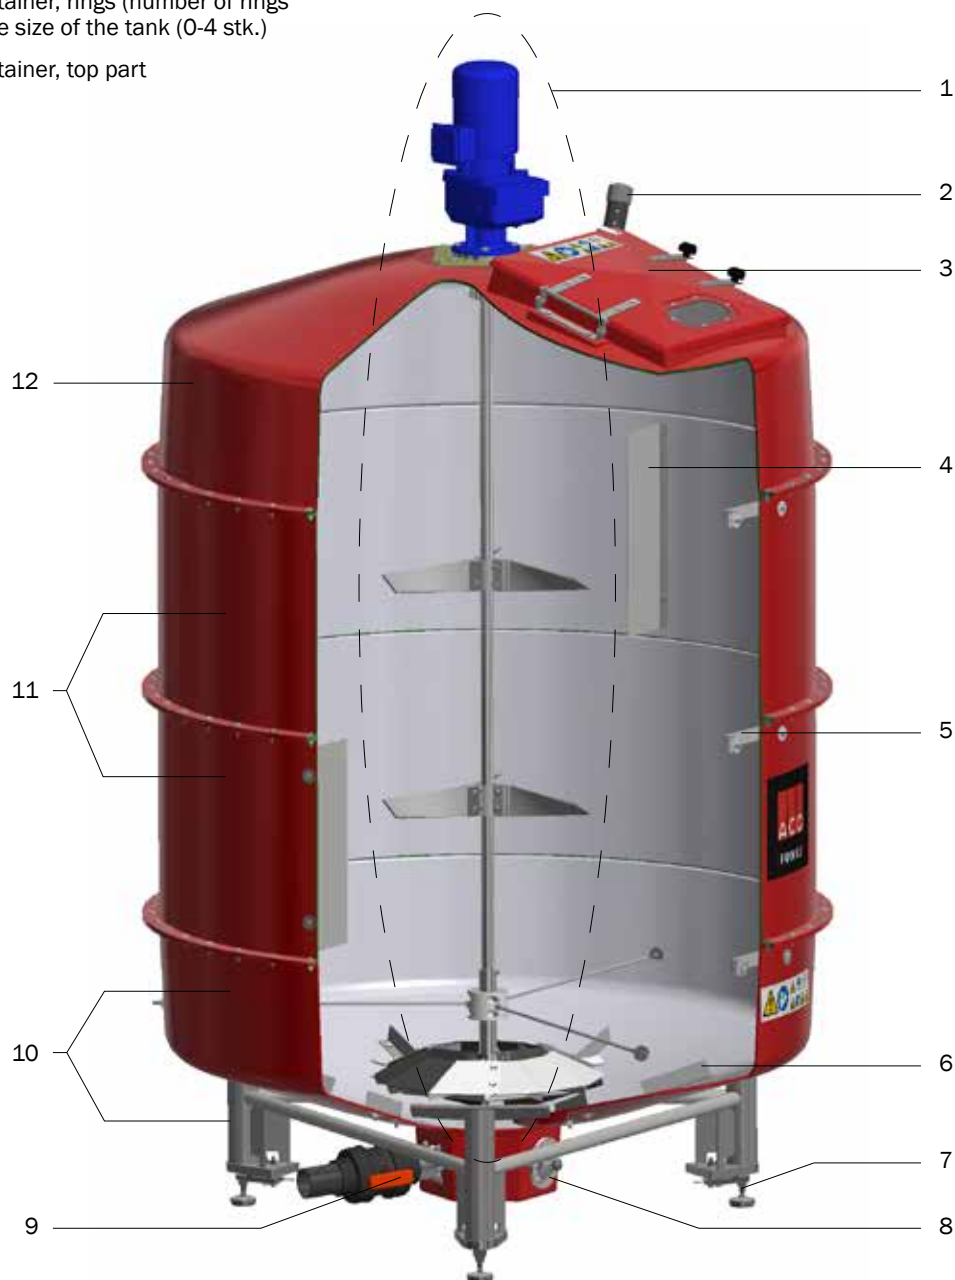

### Manufacturer and product data

*Manufacturer:* ACO Funki A/S  
Kirkevænget 5, Gjellerup  
DK-7400 Herning  
Denmark  
Tel. +45 97 11 96 00

*Product type:* Liquid feeding tank, Funki Liq Mix

Every effort has been made to ensure that the contents of this manual are correct. However, should you discover any errors, please inform ACO Funki A/S immediately so that they can be corrected.

Despite our efforts, ACO Funki A/S accepts no liability whatsoever for possible errors in the manual or for the consequences of such errors.

ACO Funki A/S reserves the right to change the contents of the manual without prior notice.

### General safety instructions

This product has been designed and manufactured in accordance with the latest engineering standards and acknowledged safety regulations, making it highly reliable. The product may, however, be dangerous for operators or third parties and may cause material damage if operated by unqualified persons or for purposes other than described.

The following safety instructions must therefore be carefully read and observed.

- The product must only be used for its intended purpose. The general instructions regarding safety and accident prevention must be observed at all times.
- Qualified personnel are persons who by reason of their training, experience or instruction and their knowledge of relevant standards and regulations, accident prevention instructions and operating conditions have been authorised by the person responsible for the safety of the machine to perform appropriate everyday activities, including the identification and prevention of potentially hazardous situations (IEC 364).
- The machine must only be operated by trained personnel. Children may only operate the machine if over 16 years of age, supervised by a qualified adult and where such operation forms part of their training/education.
- To ensure personal safety and reliable operation, only original accessories and spare parts from ACO Funki A/S must be used.
- For safety reasons, unauthorised machine alterations are not permitted.
- Maintenance and repair (of electrical parts in particular) must only be performed by qualified and trained personnel. See page 18-19.
- Voltage-carrying, pressure-activated and rotating or in any other way moving machine parts may cause serious or fatal injury if operated incorrectly or if safety instructions are not observed.
- Protection devices must never be disconnected during operation and must never be altered or weakened in relation to their intended effect.
- Current national and international guidelines and regulations regarding accident prevention must be observed at all times, as must general safety requirements.

**NOTE: THE DANISH VERSION IS THE ORIGINAL SAMPLE,  
ALL OTHER LANGUAGE VERSIONS REFER TO THE ORIGINAL SAMPLE.**

### Key to symbols

If the safety instructions described in this manual are not observed, personal injury or material damage may result. Such damage may prevent the machine from functioning correctly. Safety instructions and instructions for trouble-free operation are accompanied by the following symbols:



**Warning symbol in accordance with ISO 3864 B.3.1.**  
**Caution: risk of personal injury or material damage.**



**Warning symbol in accordance with ISO 3864 B.3.6.**  
**Caution: risk of electric shock.**



**Information symbol in accordance with ISO 3864 8.4.**  
**Important instructions for preventing damage to the machine and its function. Instructions for reliable, problem-free operation**

Sections of this manual accompanied by one of these symbols should be read with particular care!

## DECLARATION OF CONFORMITY

### ACO Funki A/S hereby declares that:

- Machine:* Liquid feeding tank, Funki Liq Mix
- Application:* The tank is only to be used for mixing dry matter and water
- Article No.:* 0340-202, 0340-203, 0340-204, 0340-205, 0340-206
- Standards:* The machine conforms to the following standards:
- EN 292-1 Safety of machinery - part 1



The machine has been manufactured in accordance with Council Directive 10/06/2013 machinery Directive 2006/42/EF and subsequent amendments.



ACO Funki A/S



Kirkevænget 5, DK-7400 Herning



[www.acofunki.dk](http://www.acofunki.dk)



[acofunki@acofunki.dk](mailto:acofunki@acofunki.dk)



+45 9711 9600



01.06.2022



ACO Funki A/S  
Lene Bryde

### Article numbers

Liquid feeding tank, Funki Liq Mix

Article no.: 0340-202, 0340-203, 0340-204, 0340-205, 0340-206

### Application

Mixing tank for liquid feeding system.

### Materials

Primary materials: fiber glass and stainless steel.

### Dimensional drawing

See page 3.


### Weight

0340-205 (2300 l.)	approx. 350 kg
0340-206 (4200 l.)	approx. 430 kg
0340-202 (6000 l.)	approx. 510 kg
0340-203 (8000 l.)	approx. 595 kg
0340-204 (9000 l.)	approx. 675 kg




## MOUNTING OF LOAD CELLS

The load cells are mounted under the feet of the bottom part of the tank. Data from the load cells is registered by a load cell amplifier mounted on the wall near the tank.

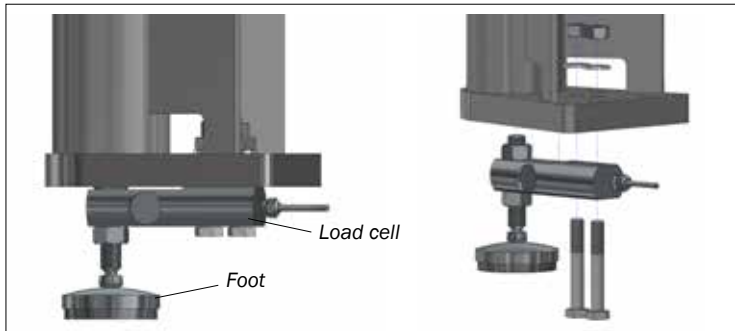

Mounting of load cells

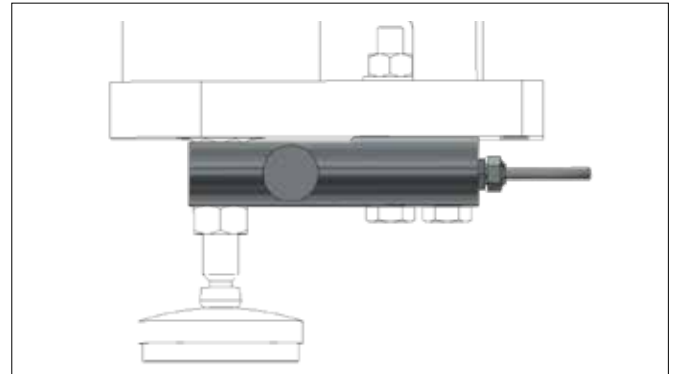

Be sure to place the load cell correctly. The completely flat side must face down


LOAD CELL KIT			
	Item no.	Description	PCS.
	0139-505	LOAD CELL KIT VF4	
1	0139-443	LOAD CELL 5510F 2000 KG	1
2	0139-444	MACHINE SHOE TYPE HJ-7C DSI	1
3	32900015	MACHINE SCREW M12X80 FZB QUAL. 10.9 DIN 931	2
4	33900028	NUT M12 A4-80 DIN 934	2
5	35600080	FLAT WASHER Ø12X13/24/2,5 A2 DIN 125 A	2

LOAD CELL KIT (8000 + 9700 L TANKS)			
	Item no.	Description	PCS.
1	77000011	LOAD CELL 5950, 7500 KG	1
2	0140-785	SPACER 5MM FOR VF7	2
3	30312045	SET SCREW M12X45 A2 DIN 933	4
4	33510019	NUT M12 A2 DIN 934	4

## POSITIONING OF THE TANK

The bottom part of the tank is placed on the floor. The floor should be approximately level.


Be sure to notice how the bottom part is placed in relation to the pump and outlet.

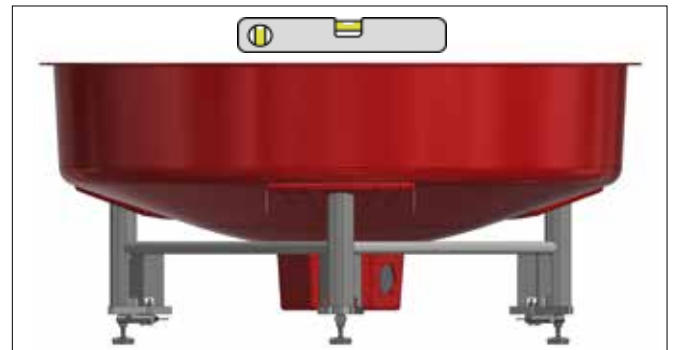


Bottom part of tank, with feet

## LEVELING THE TANK

Adjust the height so that the feet are leveled horizontally. Do not raise the height of the feet more than necessary (because of the stability).

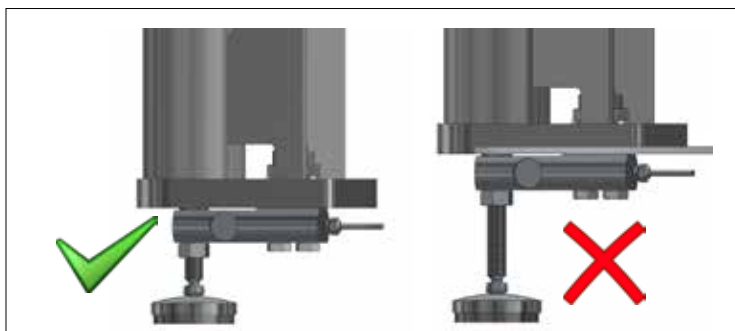

Adjusting the feet (2300, 4200 and 6000 L tanks)

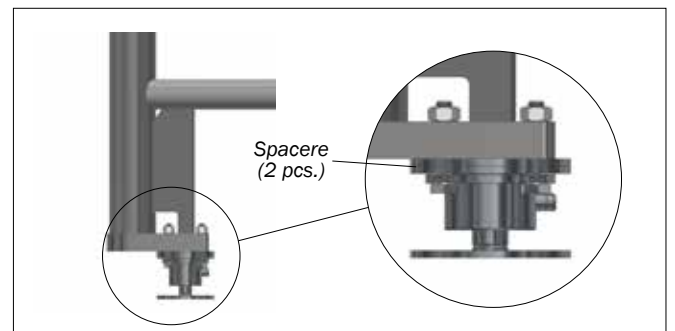

Adjusting the feet (8000 and 9700 L tanks)




### MOUNTING OF OUTLET CONNECTION

The outlet connection is placed in the bottom of the tank (see the overview illustration).

Apply two whole circles of sealants around the neck of the outlet connection and around the welded screws.

The outlet connection (with applied sealants) is mounted from the inside of the tank in one of the two pre-made holes (see ill.).

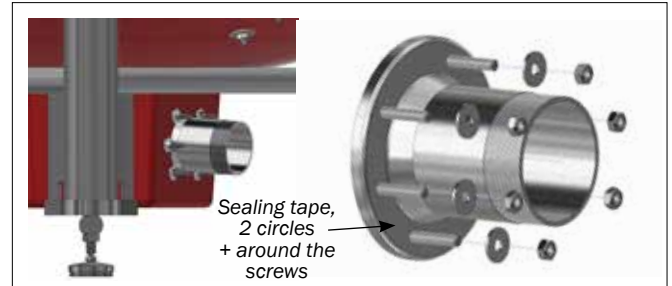


Mounting of outlet

### MOUNTING OF INSPECTION CAP


The inspection cap is placed in the bottom of the tank opposite the outlet connection (see overview illustration).

Apply two whole circles of sealants around the neck of the inspection cap and around the welded screws.

The flange (with applied sealants) is mounted from the inside of the tank in the other of the two pre-made holes (see ill.).

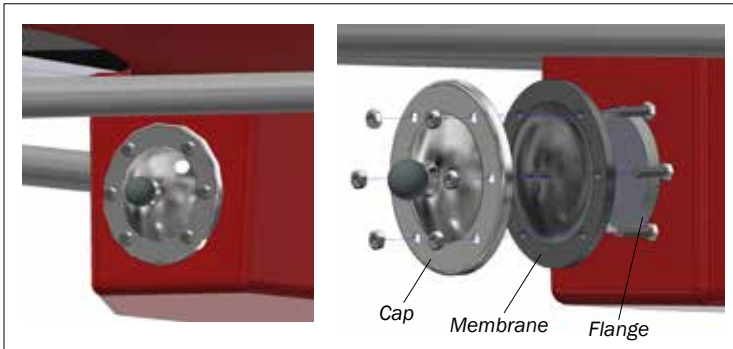

Inspection cap

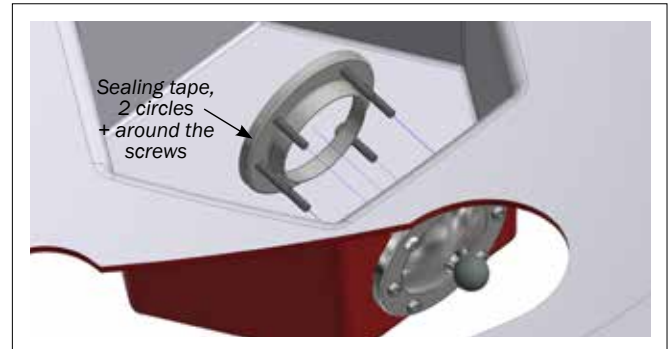


Inspection cap, sealing tape on the inside


### MOUNTING OF STEPS INSIDE OF THE TANK

Steps are mounted on the inside of the tanks. 1 step is mounted per fiberglass ring joint - i.e. 2-5 pcs. depending of the size of the tank. Mount the steps on the rings before assembling the rings.

Use the steps as drill templates. Remember to seal with sealing tape (see ill.).

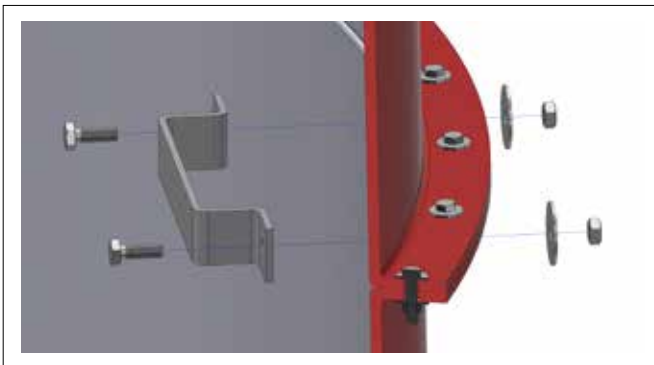

Steps inside the tank

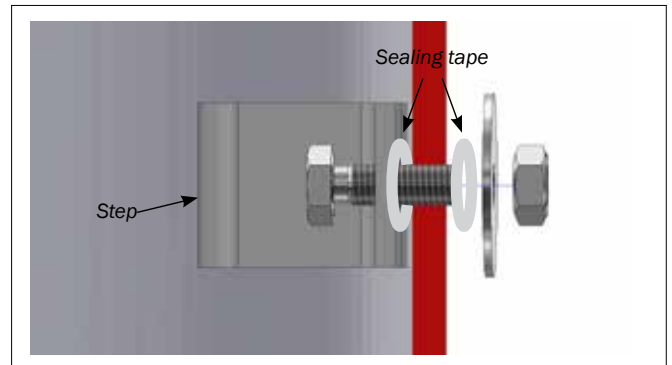


Sealing tape inside and outside the tank



## MOUNTING OF BOTTOM COUNTER AGITATORS (6 PCS.)

The bottom counter agitators are placed radially to the stirrer (see ill.). Be aware of the embedded legs in the bottom of the tank when placing the bottom counter agitators.


The bottom counter agitators are used as drill templates for two Ø11 mm holes per bottom counter agitator. Remember sealing tape (see ill.).

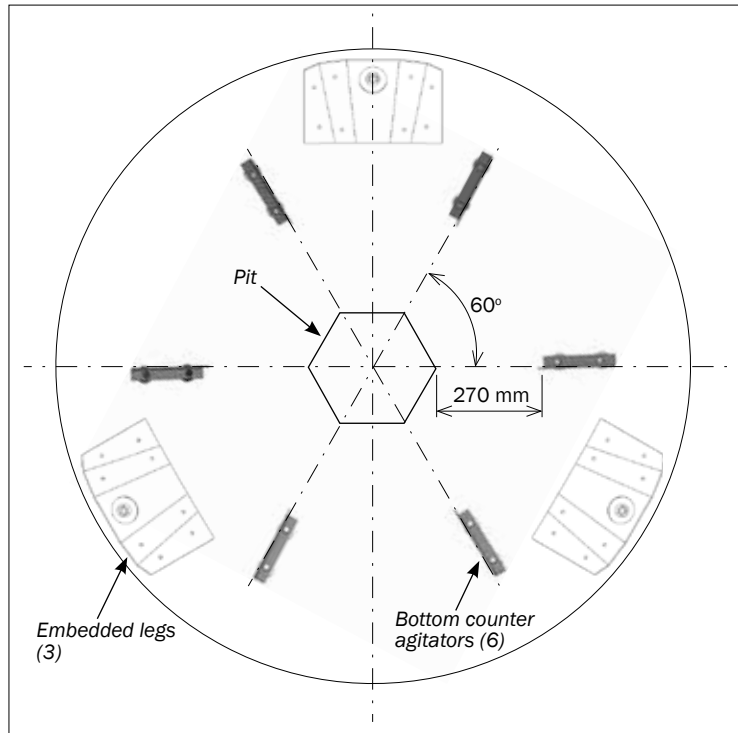

Placing of the bottom counter agitators

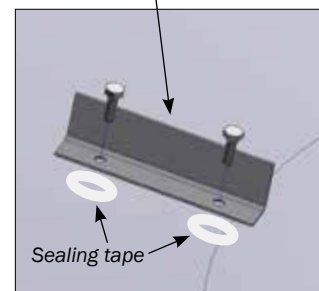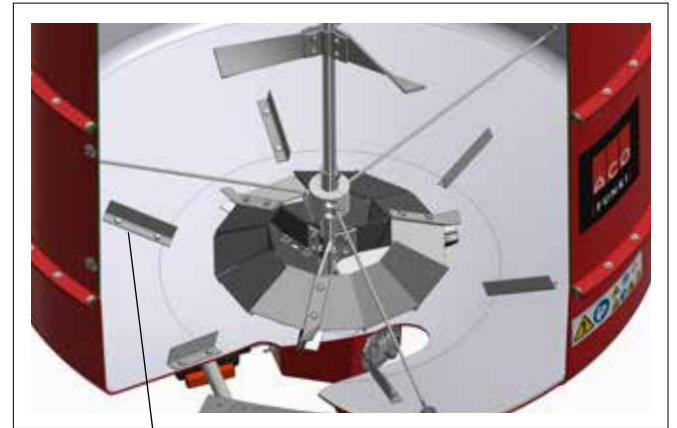

Bottom counter agitator, inside

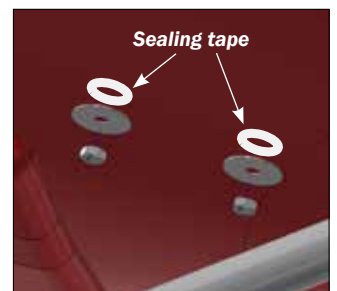

Bottom counter agitator, outside

## MOUNTING OF COUNTER AGITATOR

One counter agitator is mounted per fiberglass part of the tank:

2300 L	-	0 counter agitators
4200 L	-	1 counter agitator
6000 L	-	2 counter agitators
8000 L	-	3 counter agitators
9700 L	-	4 counter agitators

Mount the counter agitators on the rings before assembling the rings.

The counter agitators are placed vertically in the side of the tank, and horizontally in the middle of the ring. When mounting more than one counter agitator, place them alternately opposite each other (see ill.).


Use one of the counter agitators as a template for drilling two holes for each counter agitator. Remember sealing tape (see ill.).



Placing the counter agitators

### ASSEMBLING THE FIBERGLASS PARTS

Apply two whole circles of sealants around the flange. Assemble the parts flange to flange. Position the upper part so that the hatch is placed so that it is easy to access it. The tank parts are fastened as shown.

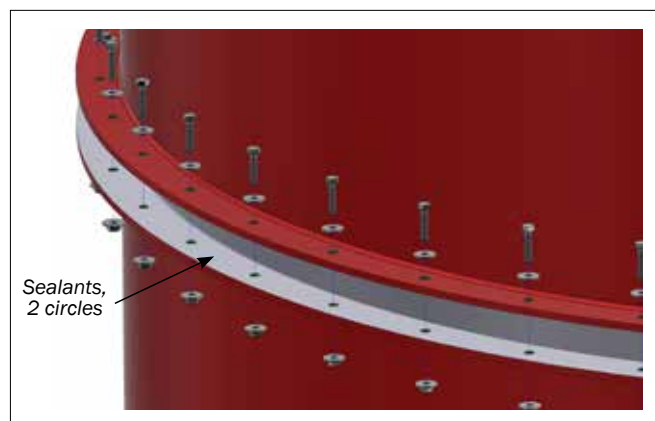

Assembling the fiberglass parts

### MOUNTING OF THE HATCH

The hatch is pre-assembled and mounted on the tank.



Hatch

## PLACING THE WARNING SIGNS

A warning sign is applied to the tank in two places, as shown. Use the clear cover labels (45x45 mm) to cover the icons not relevant to the specific tank; e.g. *acid*, *UV light* and *moving parts*. For example: If a UV light cleaner is not installed in the tank, the icon for *UV light* is covered.




Warning sign

	<b>READ THE MOUNTING INSTRUCTION!</b> Read this manual thoroughly before mounting, use and service.
	<b>CORROSIVE SUBSTANCES!</b> The tank can contain acidic substances that can cause corrosive damage to skin and material.
	<b>SLIPPERY!</b> Risk of wet and slippery areas in and around the tank.
	<b>MOVING PARTS!</b> Risk of crushing due to moving machinery in the tank.
	<b>LACK OF OXYGEN!</b> There is no oxygen in the tank. Before entering the tank, be sure to vent the tank thoroughly.
	<b>UV-LIGHT!</b> The tank can contain UV light that can cause eye damage.
	<b>SUPERVISION REQUIRED!</b> A supervising person is required outside of the tank, when someone is working in the tank.
	<b>WASH YOUR HANDS!</b> Clean yourself and used tools thoroughly after working around the tank. Disposable tools (e.g. gloves) are discarded.




Placement of warning signs

## OVERVIEW OF THE STIRRER

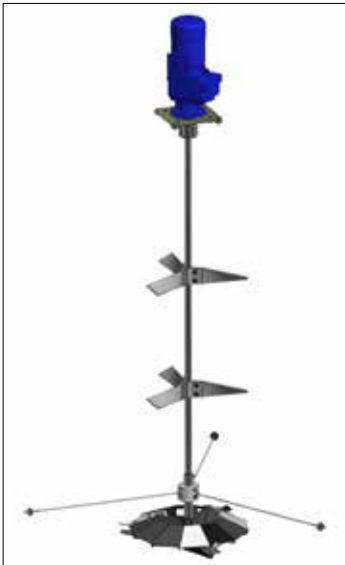


1. Gear motor
2. Tank flange
3. Coupling
4. Shaft
5. Middle agitator (number depends on the size of the tank)
6. Paddle for bottom agitator
7. Bearing bush
8. Wing blade
9. Stay bolt for split bearing bush
10. Split bearing bush
11. Bottom agitator (3 parts)

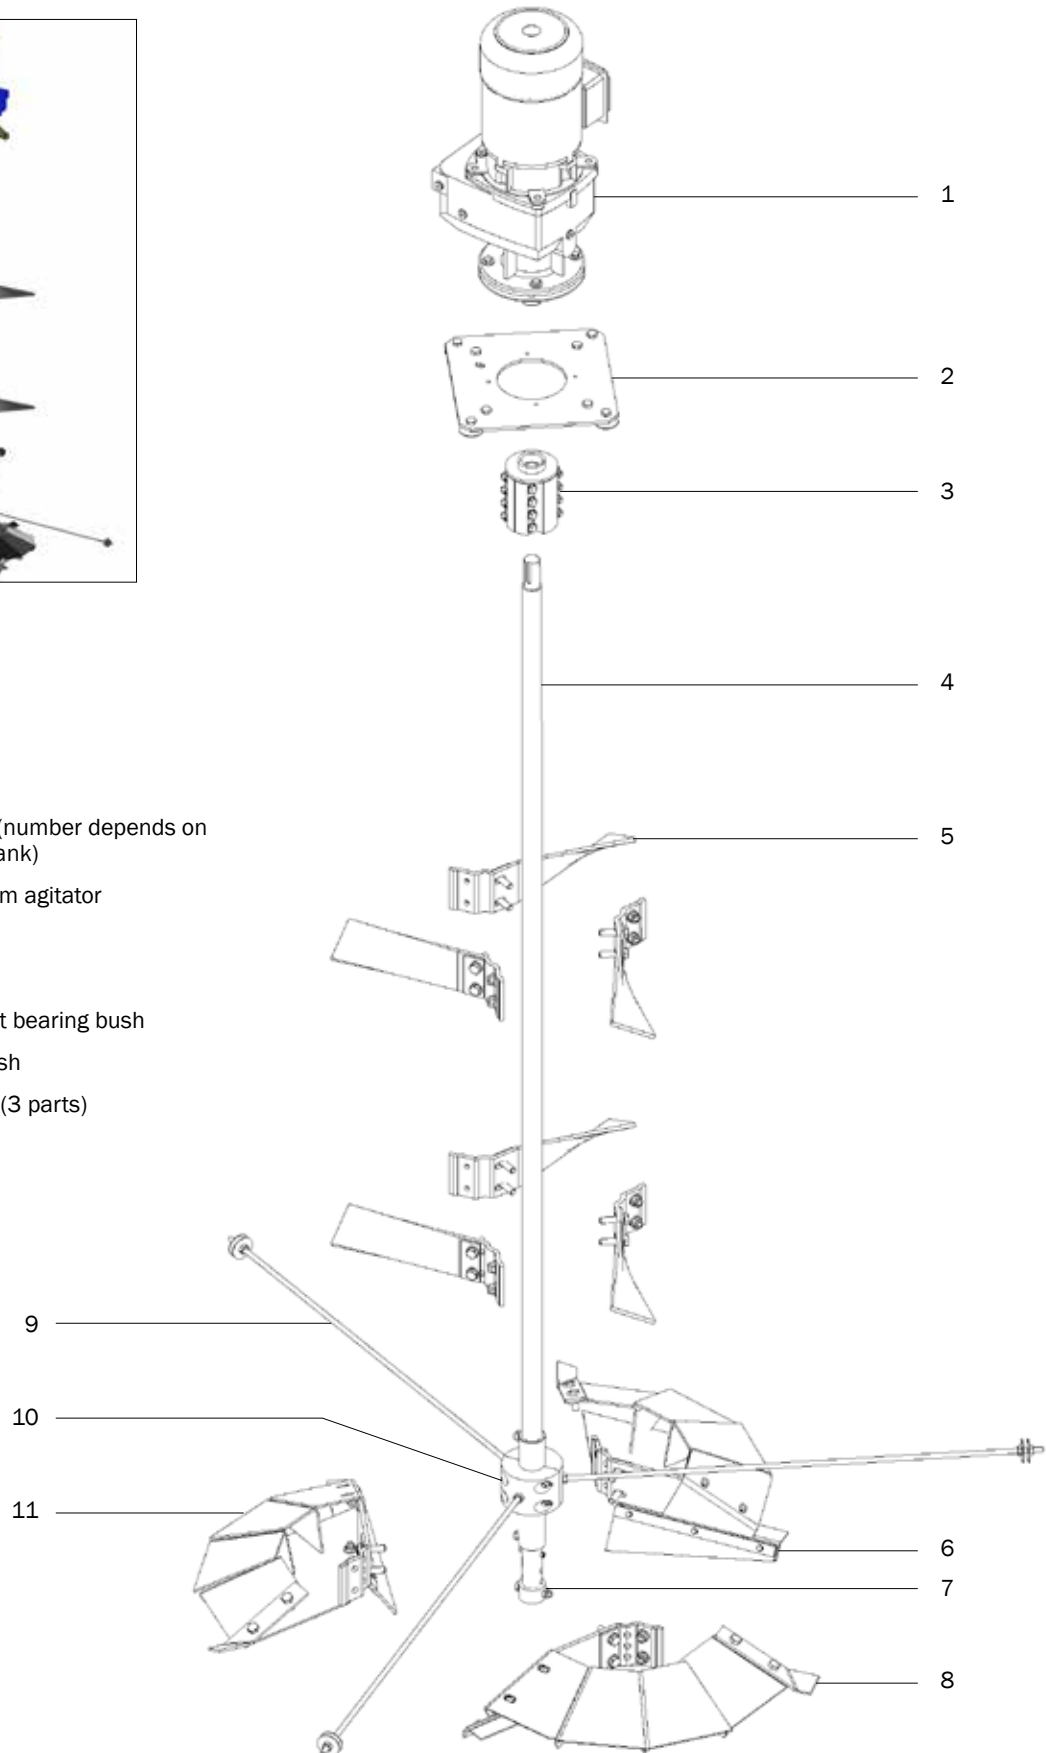

### MOUNTING OF TOP FLANGE (FOR GEAR MOTOR)

The top flange is mounted centrally over the hole in the top of the tank. Use the flange as a template for drilling 8 holes. Use sealing tape on the inside around the screws, and fasten the flange using washers and nuts.

Seal the joint along the edges of the hole and the flange. (It is advised to apply the sealants last, due to the discomfort of the smell.)

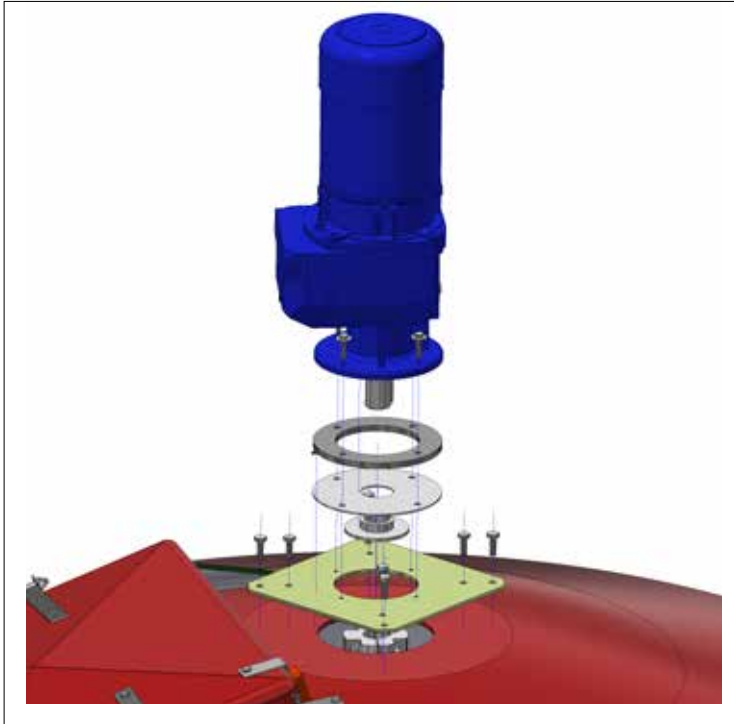

Mounting of gear motor and top flange


### MOUNTING OF GEAR MOTOR

The gear motor is placed directly onto the top flange, and is fastened.

Ensure proper ventilation for the gear motor.

Avoid impact on the shaft!


See appendix for service and maintenance of the gear motor.

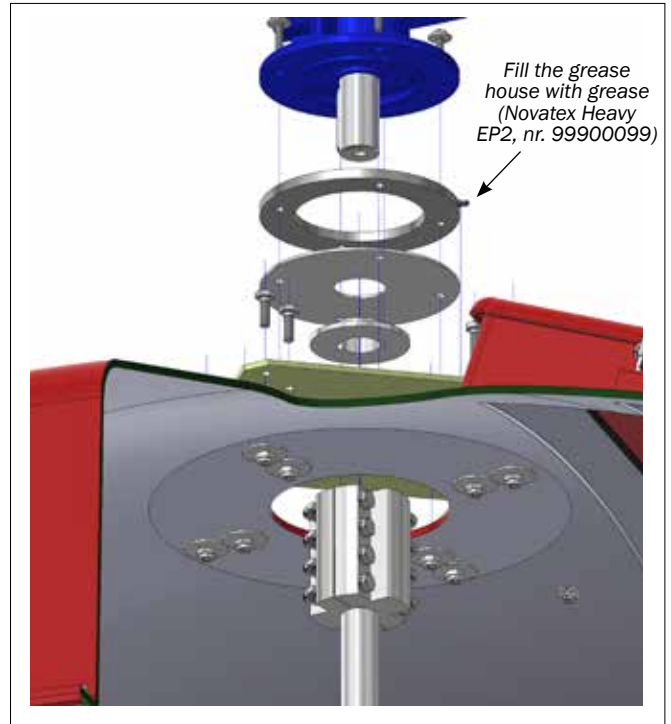


### MOUNTING OF SHAFT FOR STIRRER

The shaft for the stirrer is mounted on the free end of the gear motor shaft using the clamp coupling. Make sure that the shaft ends of the gear motor and the stirrer are clean and free of tape etc. The steel bushing (with the split bearing bush) is mounted on the shaft before mounting the clamp coupling.

Next, the shaft for the stirrer (with the coupling) is pushed up to the free shaft end of the gear motor so that the two shafts meet. Maintain this position while the 4 bolts are carefully fastened.

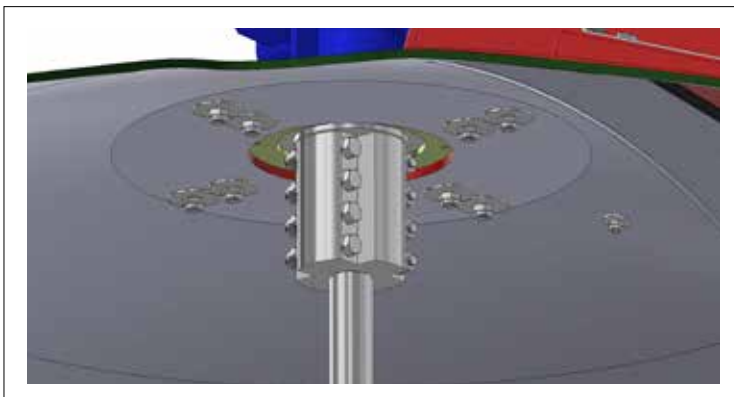

Clamp coupling

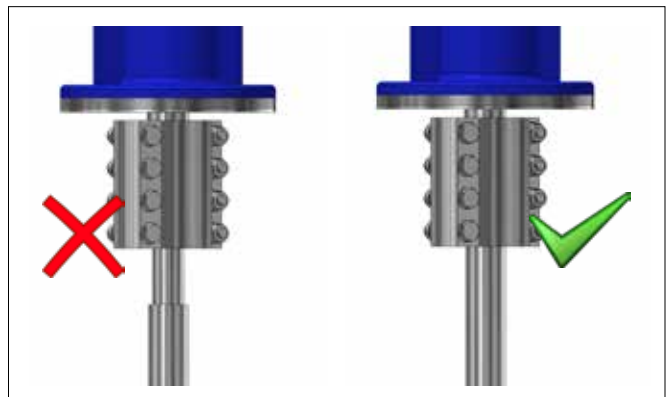

Push the neck of the shaft all the way up to the clamp coupling




## MOUNTING OF BOTTOM AGITATOR


First, assemble two of the three parts of the bottom agitator loosely on the floor (see ill.). Mount one of the three wing blades at the joint of the two agitator parts.

One of the three paddles are mounted on the third part of the bottom agitator (see ill.). Place the fixing plate (with screws) on the paddle, and mount both parts on the bottom agitator from the bottom side.

Next, mount the three parts of the bottom agitator around the shaft just above the bearing bush (in the bottom end of the shaft).

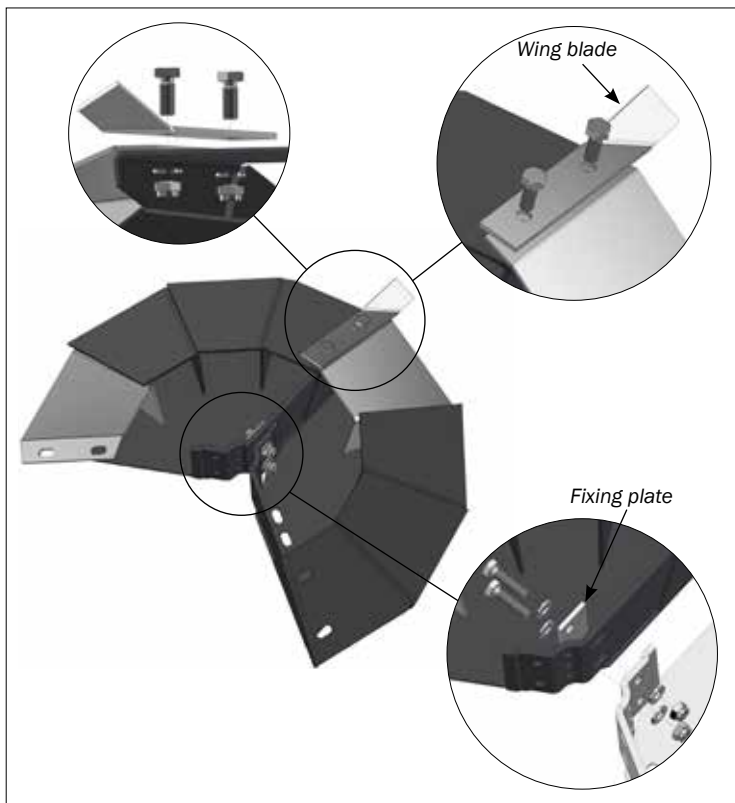

1. Two of the three parts of the bottom agitator are assembled, and a wingblade is mounted onto it

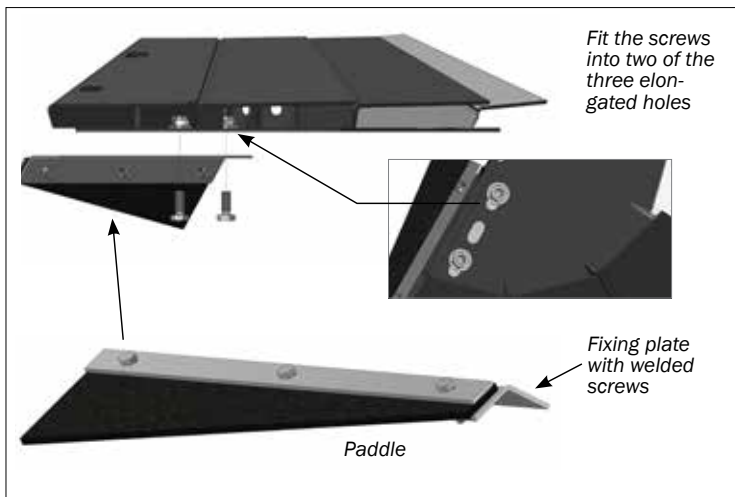


2. Installation of bottom agitator paddle.


Mount the remaining two wing blades.

Mount the remaining two paddles in the same way as the first.

Use a torque wrench (117 Nm) when tightening all screws and nuts - it is especially important to insure that the bottom agitator is soundly fixed to the shaft.

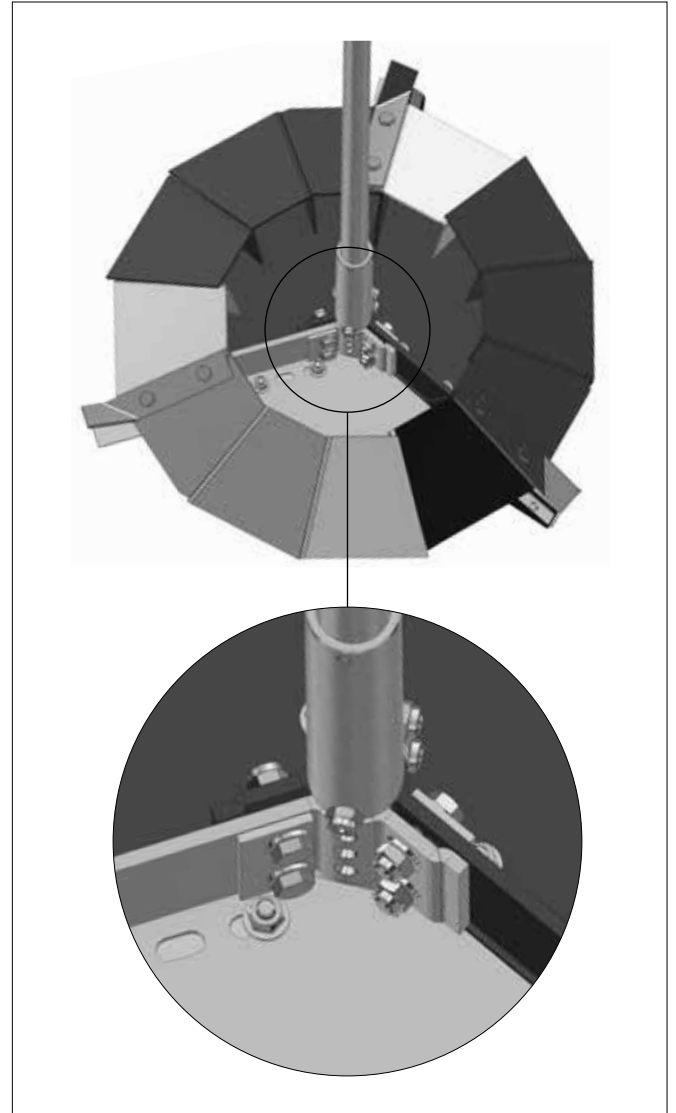

3. The three parts are fixed around the shaft

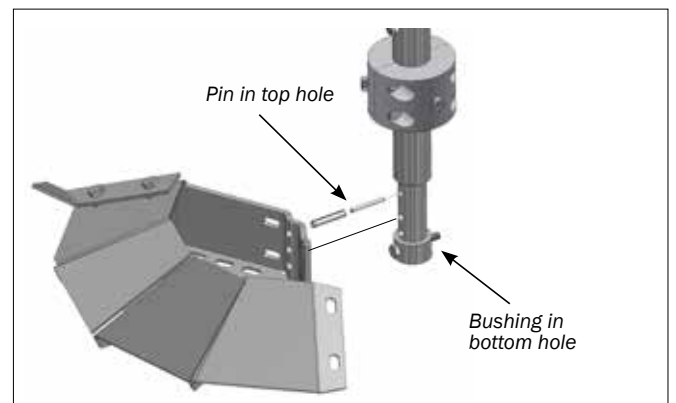

Placing of pin and bushing - for positioning the bottom agitator



## MOUNTING OF SPLIT BEARING BUSH

The split bearing bush is mounted in the bottom end of the shaft to absorb radial forces on the stirrer.

**NOTE: For the 8000 and 9700 L tanks one extra set of bearing bush with stay bolts is mounted further up on the shaft (see ill. on next page)**


The steel bushing (with split bearing bush) is mounted on the shaft before the shaft is mounted on the gear motor. The split bearing bush is carried by three stay bolts which are fixed through the sides of the tank (see ill.) The placement of the stay bolts is illustrated on the next page.

Place the stay bolt so that the end with the long thread is turned outward to the tank side. Screw the other end into the split bearing bush, **but not all the way to the steel bushing**, and fix it with a nut.


Make sure that the stay bolts do not deform the plastic bearing.

Adjust the bearing up/down to level the stay bolts, and fix the bushing to the shaft with the hexagon screws. Remember to seal with sealing tape (see ill.).

Check that the stay bolts and the split bearing bush are fixed tightly. Tighten them more if needed.

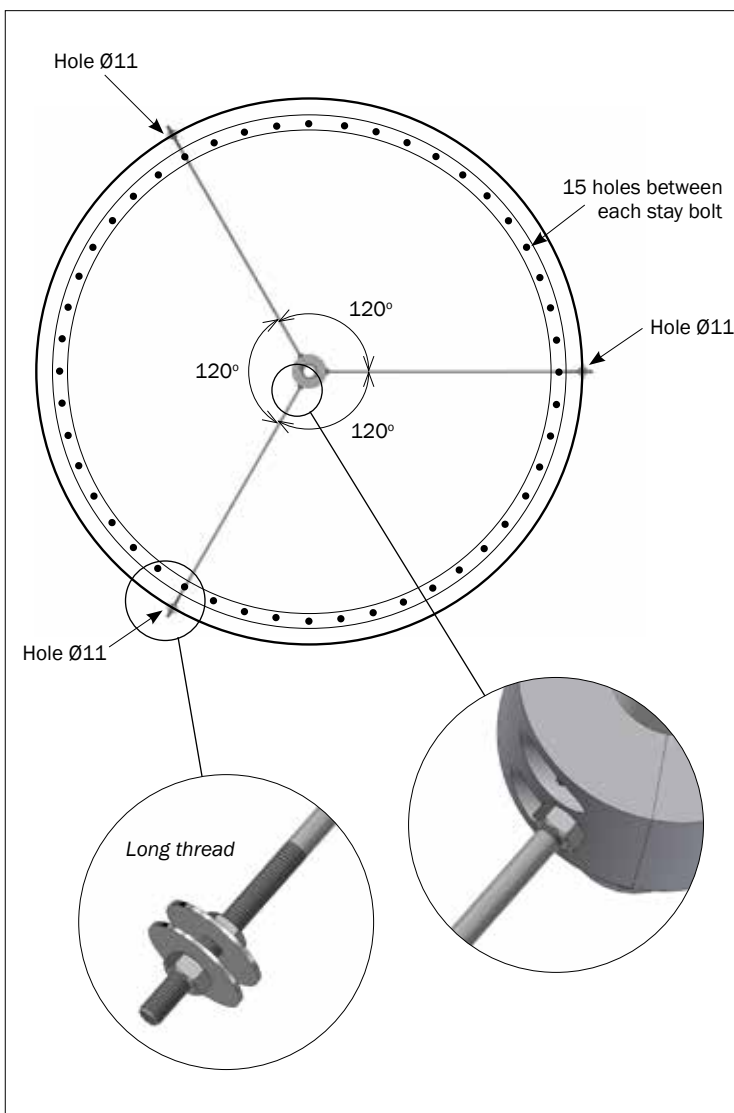


Split bearing bush, placement of stay bolts

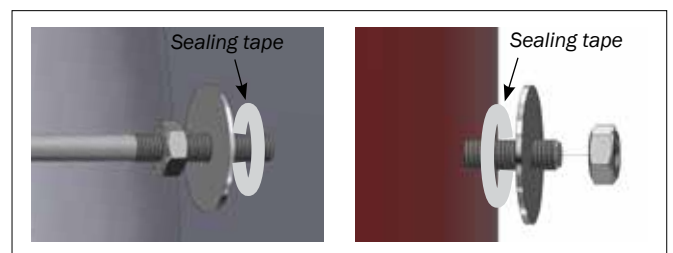


Stay bolt, inside

Stay bolt, outside

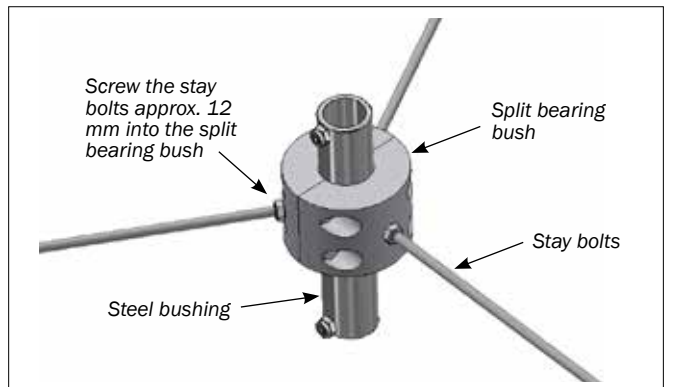


Split bearing bush, assembled

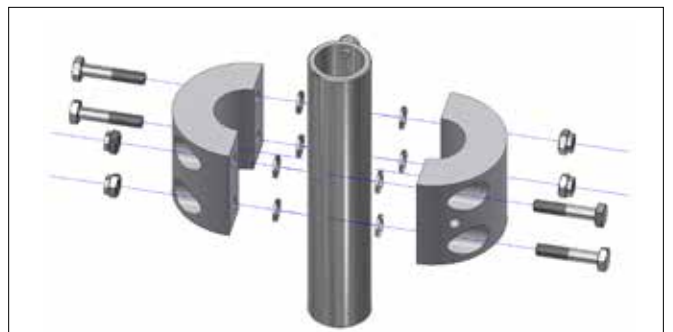


Split bearing bush, unassembled

## MOUNTING INSTRUCTION - MIXING TANK

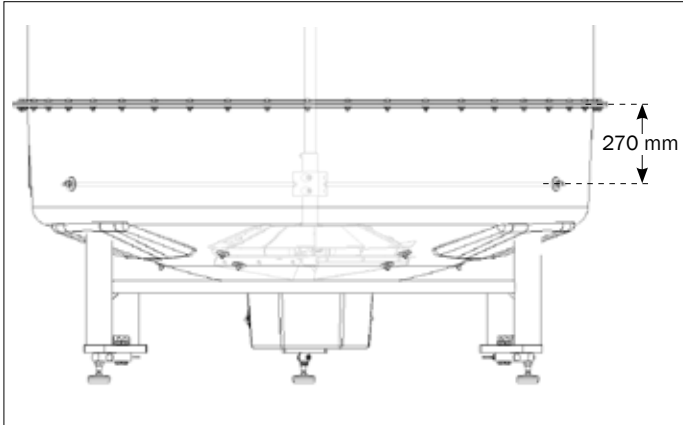


Placement of split bearing bush in the tanks of 2300, 4200 and 6000 L

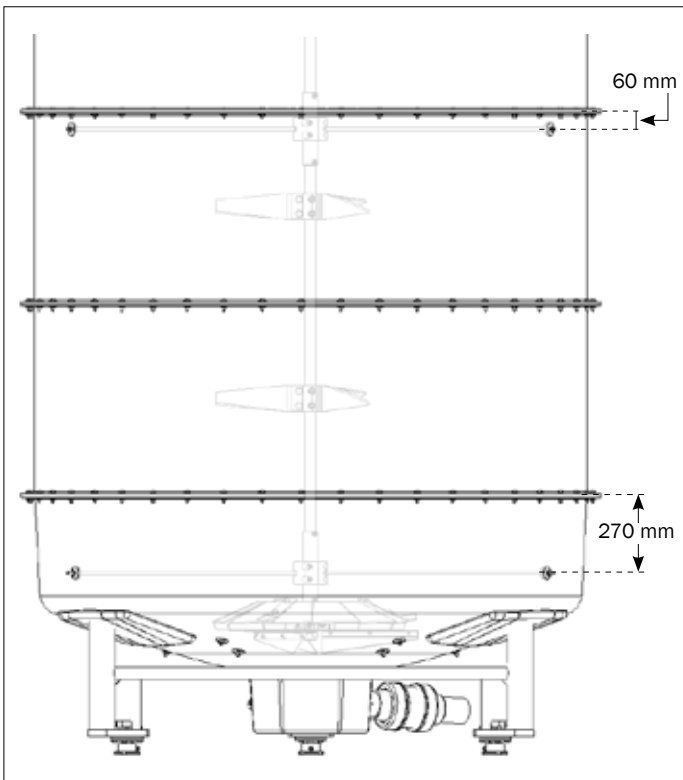

Placement of split bearing bush in the tank of 8000 liter

Drill the holes (as shown on the ill.) approx. 270 mm below the **lower** fiberglass joint.

In the 8000 and 9700 L tanks one extra split bearing bush with stay bolts are mounted. The holes for these three stay bolts are placed approx. 60 mm below the **second lowest** fiberglass joint.

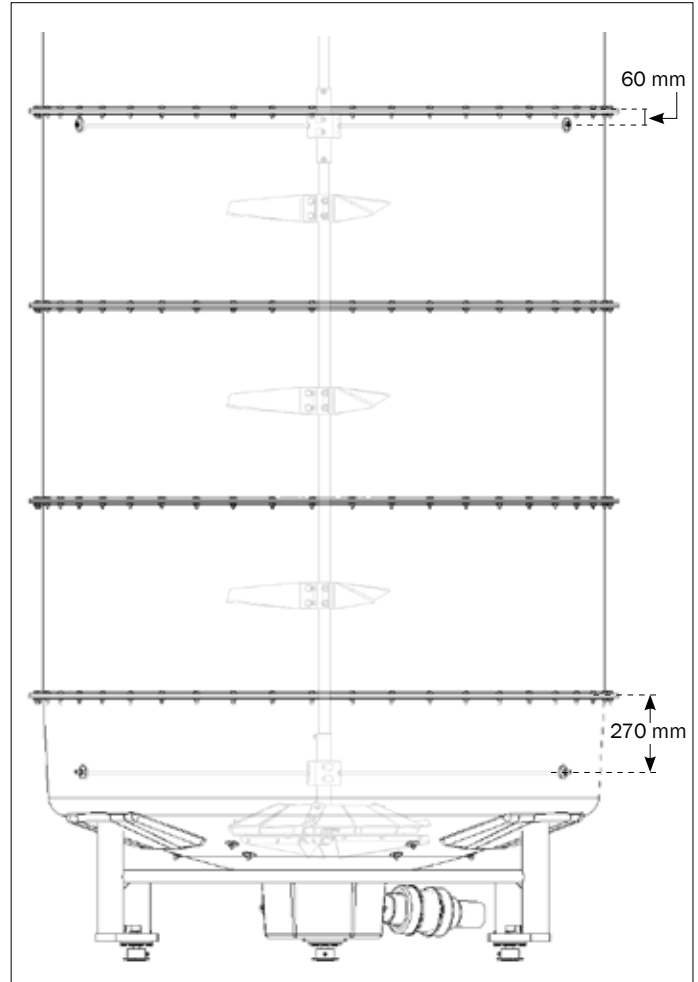

Placement of split bearing bush in the tank of 9700 liter

## MOUNTING OF MIDDLE AGITATOR

One middle agitator is mounted per fiberglass part of the tank:


2300 L	-	0	middle agitators
4200 L	-	1	middle agitator
6000 L	-	2	middle agitators
8000 L	-	3	middle agitators
9700 L	-	4	middle agitators

For the tanks with more than one middle agitator, the agitators are distributed regularly through the tank (see ill. below).


First, assemble two of the three wings of the middle agitator loosely on the floor (see ill.).

Then, assemble the two parts with the third around the shaft of the stirrer in the tank.


Fix the middle agitator around the shaft in the correct position and tighten screws and nuts with a torque wrench (approx. 117 Nm).

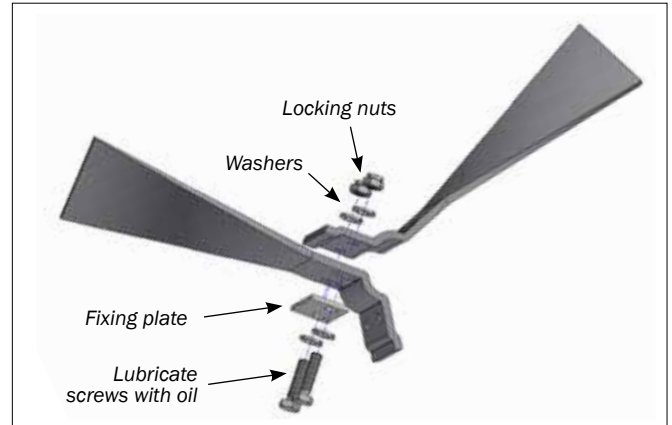

Two of the three parts of the middle agitator are assembled loosely on the floor

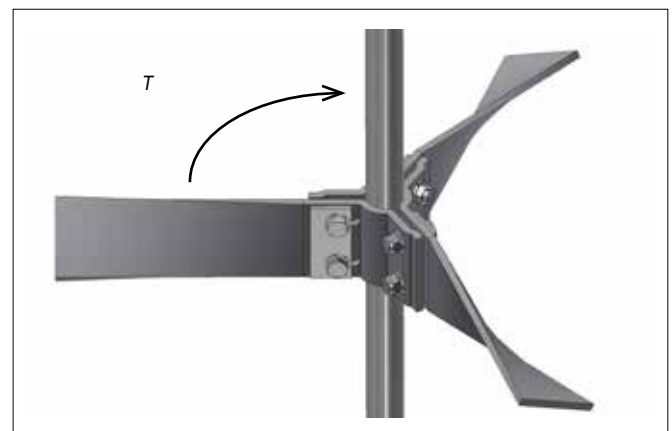


Middle agitator, assembled

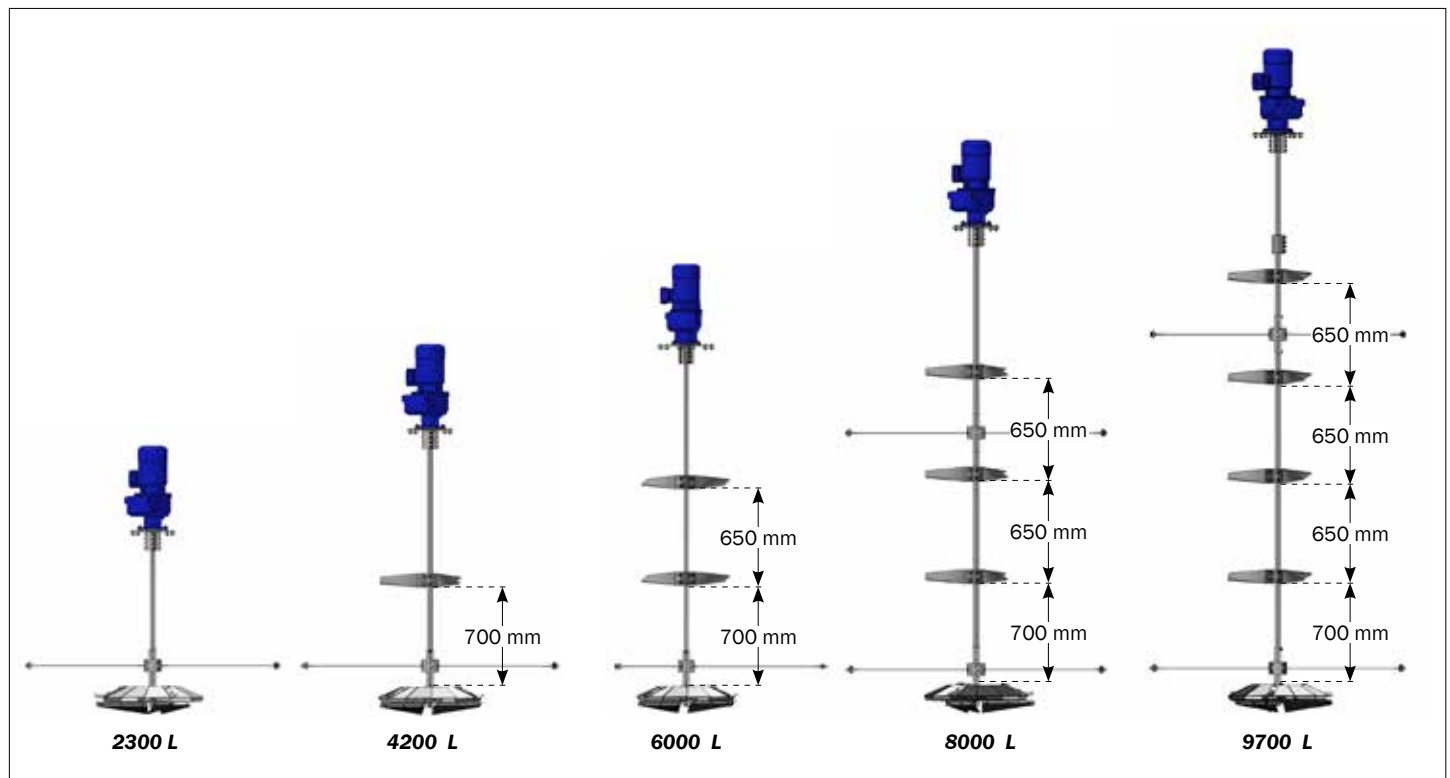

Placement of middle agitators

## PIPE FOR CONNECTING THE PUMP

A ball valve, a PVC pipe and a piece of flexible hose are mounted on the outlet connection. The feed pump is then connected to the flexible hose. The piping from the outlet to the pump should be as short as possible.

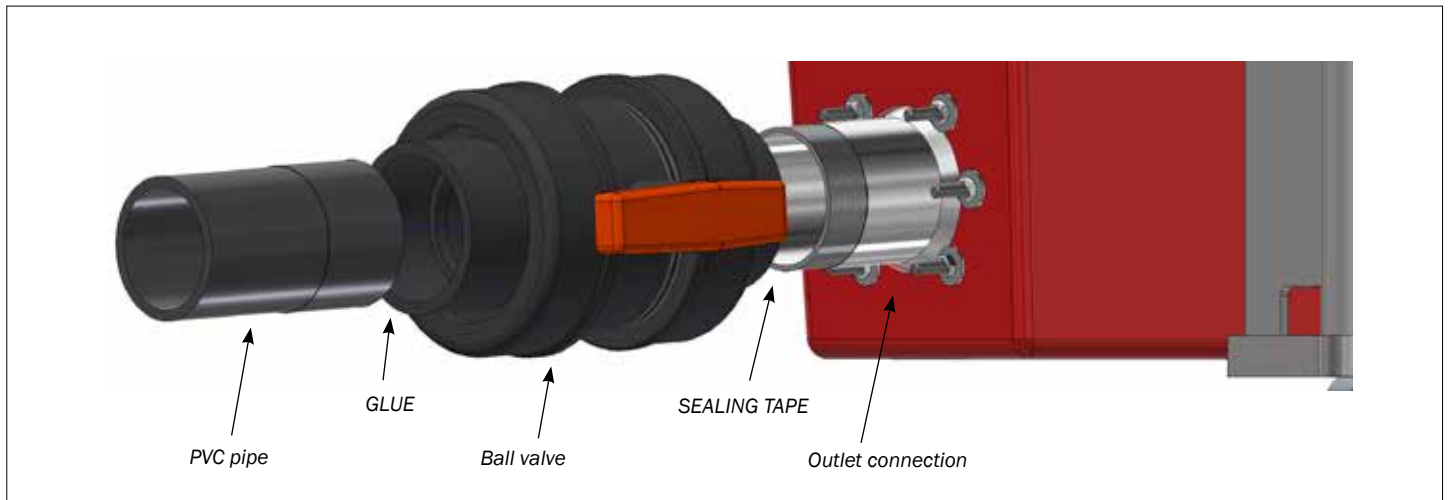

Pipe for connecting the pump

## PIPE FOR INTAKE OF LIQUID COMPONENTS

The intake for liquid components (except water and acid) is placed in the top of the tank (see ill.). Remember to carefully seal the passage around the hole with sealing tape. The piping for liquid components should be joint into one pipe immediately before the tank.

### Intake of water through the bottom of the tank:

Water can be let in via the pipe for the feed pump in the bottom of the tank (see ill.).

### Intake of acid through the top of the tank:


Inlet of acid is to be placed separately in the top, opposite the hatch, and as near the wall of the tank as possible (see ill.).

## PIPE FOR INTAKE OF DRY COMPONENTS

The intake for dry components is placed in the top of the tank (see ill.). Use the intake pipe as a drill template.

Carefully seal the contact face with sealing tape. Place the pipe in the hole and mount it with screws (from the outside) and washers and nuts (on the inside).

Mount a rubber sleeve on the upper part of the intake pipe using a clamp ring.

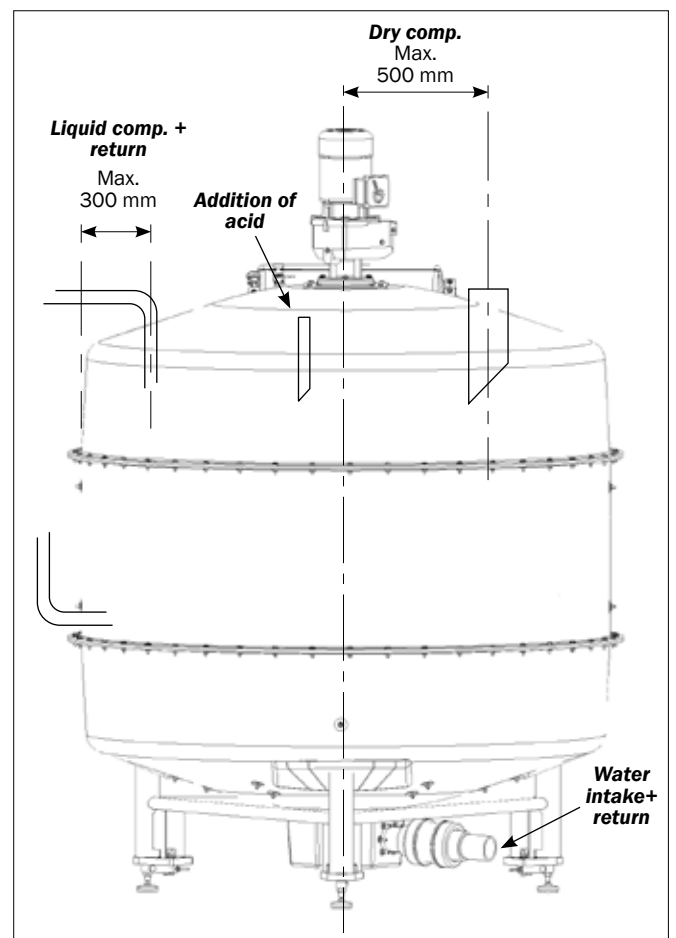

Intake of liquid and dry components

All pipes for intake are ordered separately.

### RETURN PIPES


The return pipes should be brought together into one pipe, immediately before the tank. There are several options for placing return inlets:

- At the top of the tank, approx. 300 mm from the side of the tank (in the same way as the inlet pipe for liquid components).
- In the side of the tank (be aware of steps, counter agitators and other elements mounted in the tank).
- At the bottom of the tank (through the pipe for the feed pump)

Be aware that the feed jet from the return pipe must not be directed directly into the bottom of the tank, as this allows air to be drawn out into the feed pipe.

### PIPE FOR VENTILATION OF THE TANK

The ventilation pipe is placed in the top of the tank. Remember to seal the passage with a flexible sealant around the hole.

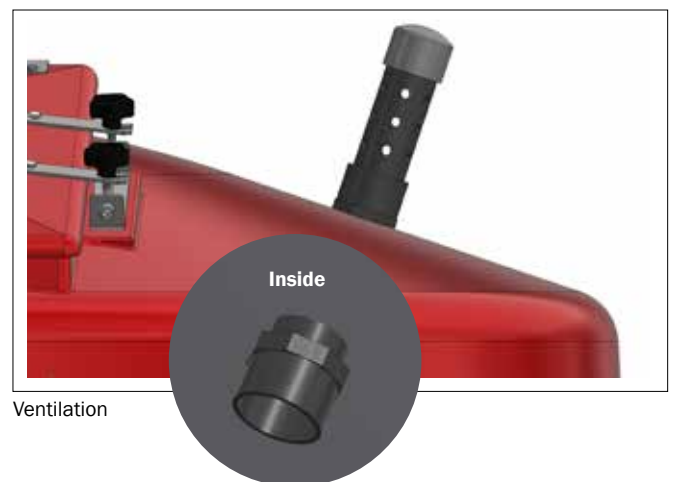


### SAFETY SWITCH


A sensor (safety switch) is mounted onto the hatch, securing that the motor disconnects when the hatch is opened.

The brackets for the switch are mounted on the hatch and tank with the supplied set screws and locking nuts. Seal around the screws with sealing tape.

Mount the sensor on the brackets using hexagon socket screws. The part of the sensor with the cable is mounted on the bracket on the tank.

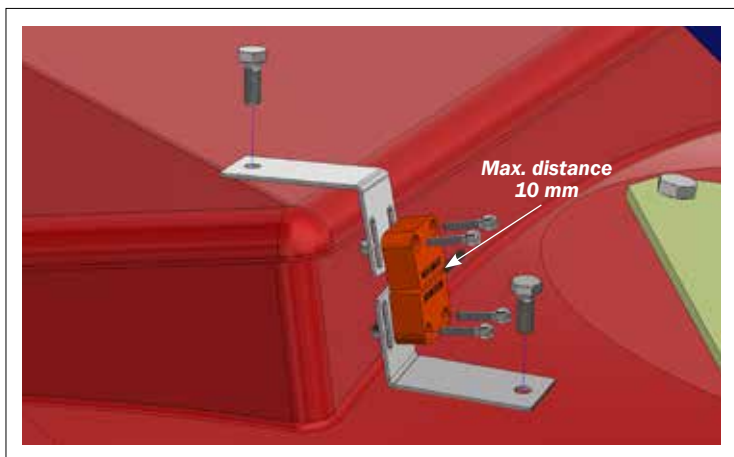

Safety switch on the hatch

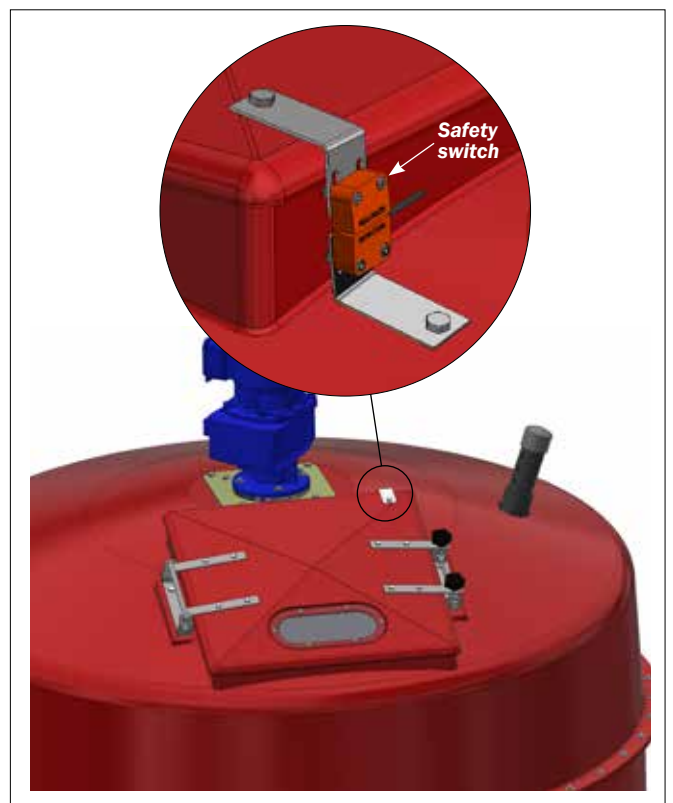

### INTERNAL WASHING OF THE TANK, MANUALLY

If you wish to wash the tank thoroughly on the inside, you can use a high pressure cleaner.  
Please note the following safety precautions:

- Before opening the tank, the tank must be ventilated thoroughly. This is best done by removing the inspection cap in the bottom of the tank and rinse the tank thoroughly with water
- All work in the tank must always be supervised by a person outside of the tank

### DISASSEMBLY - SAFETY PRECAUTIONS

When disassembling parts of the tank, please note the following safety precautions:

- Disconnect the power for the gear motor when dismantling parts and when working in the tank. All work in the tank must always be supervised by a person outside of the tank.
- Before opening the tank, the tank must be ventilated thoroughly. This is best done by removing the inspection cap in the bottom of the tank and rinse the tank thoroughly with water.
- When the safety precautions have been followed, one or more parts can be demounted. See this instruction for information on how the tank parts have been assembled.

SERVICE- AND MAINTENANCE INTERVALS	
Interval	Task
Min. every 3 months	<ul style="list-style-type: none"><li>• Visual control</li></ul>

#### **Visual control:**

- Check the tank for leaks.
- For leaks, such as dripping water from the tank. Tightly bolt around the tank.

## SERVICE AND MAINTENANCE OF THE GEAR MOTOR

### IMPORTANT SAFETY PRECAUTIONS:

- All work on the gear motor regarding transportation, installation, service and maintenance must be carried out by trained personnel
- There is a risk of injuries due to fast rotating and possibly hot machine parts. Installation and maintenance must only be carried out on stationary and cooled gear. The drive must not be energized and must be secured against accidental connection
- Wear protective gloves - there is a risk of burns due to hot oil
- After disconnection from supply voltage, live parts of the appliance and power connections must not be touched immediately as the capacitors may be charged

SERVICE- AND MAINTENANCE INTERVALS	
Interval	Task
Min. every 6 months	<ul style="list-style-type: none"> <li>• Visual control</li> <li>• Control of noise</li> <li>• Oil level control</li> <li>• Visual control of tube</li> <li>• Lubrication with grease (grease house between gear and tank)</li> <li>• Replacement of the automatic lubrication system / excess grease is removed (At operational times &lt; 8 hrs. / day: the interval for changing the lubrication system is up to 1 year. Every second time the lubrication system is changed, the lubrication collecting container is emptied or changed)</li> </ul>
At operating temperatures of up to 80°C: After every 10,000 operating hours, at least every 6 months	<ul style="list-style-type: none"> <li>• Change the oil (When using synthetic products, the interval doubles)</li> <li>• Clean the ventilation valve. Replace, if needed</li> <li>• Replace the sealing rings for the shaft, if they are worn</li> </ul>

### Visual control:

- Check the gear unit for leaks, external damage and cracks in hose lines, hose connections and rubber buffers
- For leaks, such as dripping gear oil or e.g. refrigerant, damage or cracks, the gear must be repaired

### Control of noise:

- Noise or vibrations in the gear are signs of damage to the gear unit. Disengage the gear unit and carry out a general inspection

### Oil level control:

- Only check the oil level when the gear is disengaged, stationary and cooled off. The drive must not be energized and must be secured against accidental connection

### Lubrication with grease:


- The grease house is replenished with grease (see illustration in this mounting instruction under "Mounting of the gear motor"). When using acid vapor cleaners in the tank, the grease house is replenished every 3 months.



### **Replacing the automatic lubrication system:**

- Unscrew the protection cap
- Unscrew the lubrication system, and replace it with a new system
- Remove excess grease from the adaptor
- Activate the automatic lubrication system

Every second time the lubrication system is changed, the lubrication collecting container is emptied or changed. Empty the container by unscrewing it. The plunger in the container is pushed in and the pressed out grease is removed. The container is cleaned and screwed in again. If the container is damaged, replace it with a new one.

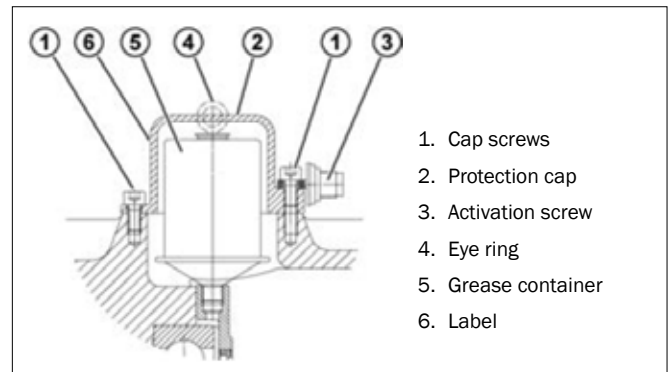


### **Changing the oil:**

- Cool the gear. Wear protective gloves due to possibly hot oil
- Place a drip tray under the outlet
- Unscrew the oil level plug completely
- Let all the oil run out of the gear
- Screw the oil drain plug in, and tighten it
- Fill with new oil until the oil starts to run out of the oil level hole. If using an oil level container, the oil is filled via the containers top opening.

### **Cleaning (or replacing) the ventilation valve:**

- Unscrew the ventilation valve and clean it (e.g. using an air compressor). Screw it back in.
- Replace the valve (incl. sealing ring), if needed

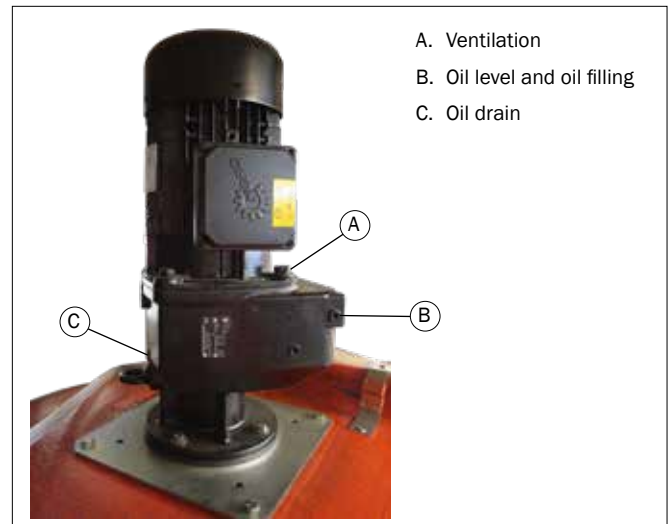

### **Replacing the sealing ring for the shaft:**

- When a distinct leakage of dripping oil is formed around the sealing lips, the shaft seal ring must be replaced
- During assembly, the space between the sealing- and the protective lip is filled approx. 50% with grease
- Note: the new sealing ring must not continue in the track of the old ring

### **Lubrication types**

BEARING GREASE: Novatex Heavy EP 2, item no.. 99900099

OIL: Mineral oil ISO VG 220

## BILL OF MATERIALS - MIXING TANK 2300 L

BILL OF MATERIALS - MIXING TANK 2300 L, WITHOUT STIRRER			
	Item no.	Description	PCS.
	0340-205	MIXING TANK 2300 L	
1	0140-110	Bottom part for tank VF	1
2	0140-120	Top part for tank VF7	1
3	30308035	Set screw M8x35 A2 DIN933	45
4	33508013	Nut M8 A2 DIN934	63
5	35600058	Nut washer Ø8x8,4/24/2 A2 DIN9021	104
6	0139-710	Bottom agitator VF4-B stains.	6
7	0139-547	Disc ø45/10,5X2 stainless	12
8	30310030	Set screw M10x30 A2 DIN933	12
9	33510017	Nut M10 A2 DIN934	12
10	0139-505	Load cell kit VF4	3
11	0300-216	Ventilation for mixing tanks	1
12	29100001	Thread tape 1 roll = 10 m	1
13	99900099	Grease for acid protection house, gear LF tank	1
14	74520	Flexible water sealer 300ml	1
15	29900003	Joint band 6mm, sold in rolls of 8 meters	16
16	0140-040	ACO funki logo label 30x30 cm for LF tank	1


	Item no.	Description	PCS.
17	0140-064	PVC ball valve 3"/Ø90	1
18	0140-063	PVC pipe ø90 for 3" valve	1
19	0139-495	Inspection flange vf4	1
20	0138-451	Membrane DN40	1
21	0139-496	Inspection cover VF4	1
22	0140-140	Outlet pipe for liquid feeding tank VF7	1
23	0140-028	Bracket for sensor	2
24	0140-026	Safety RFID sensor IP69 5 meter cabel	1
25	0140-027	Safety RFID sensor ip69 key	1
26	38504020	Hexagon socket screw M4x20 ch A2 DIN912	4
27	30308020	Set screw M8x20 A2 DIN933	2
28	33908001	Lock nut M8 A2 DIN985	2
29	33904000	Lock nut M4 A2	4
30	0140-035	Safety label 35x10 cm for liquid feeding tank	2
31	0140-036	Cover label 45x45 mm for 0140-035, white	6



## BILL OF MATERIALS - MIXING TANK 2300 L

BILL OF MATERIALS - MIXING TANK 2300 L, ONLY STIRRER			
	Item no.	Description	PCS.
	0340-205	MIXING TANK 2300 L	
1	0139-697	Shaft 2300 vf4-b comp. Stainls	1
2	0139-651	Tension pl.F/bot.Agitat.Stainl	3
3	0330-015	Wearing bushing, long	1
4	0330-020	Split bearing bush	1
5	0139-716	Bottom agitator 1/3 part vf4-b	3
6	0139-869	Paddle for bottom agitator	3
7	0139-717	Wing blade vf4-b	3
8	0139-547	Disc ø45/10.5X2 stainless	14
9	30312045	Set screw m12x45 a2 din 933	6
10	35600080	Flat washer ø12x13/24/2,5 a2 din 125 a	24
11	33912000	Lock nut m12 a2 din 985	18
12	33510017	Nut m10 a2 din 934	9
13	30312030	Set screw m12x30 a2 din 933	6

	Item no.	Description	PCS.
14	0139-511	Stay bolt f/bottom bear. Vf4	3
15	0140-200	Coupling ø30/ø40x118 stainless steel	1
16	0139-999	Tank flange ø200	1
17	35600058	Nut washer ø8x8,4/24/2 a2 din9021	4
18	30310030	Set screw m10x30 a2 din 933	8
19	33900029	Lock nut m10 a2 din 985	8
20	74038093	Gear motor sk32f 100lp/4 230/400	1
21	30308035	Set screw m8x35 a2 din 933	4
22	35600044	Star washer ø8/8,4 a2 din 6798 a	4
23	0140-169	Lid for grease protection of large gear	1
24	0140-168	Bushing for grease protectionof large gear	1
25	0140-167	House for grease for protection of large gear	1
26	99000001	Lubricating nipple m5 coned type a din 71412	1

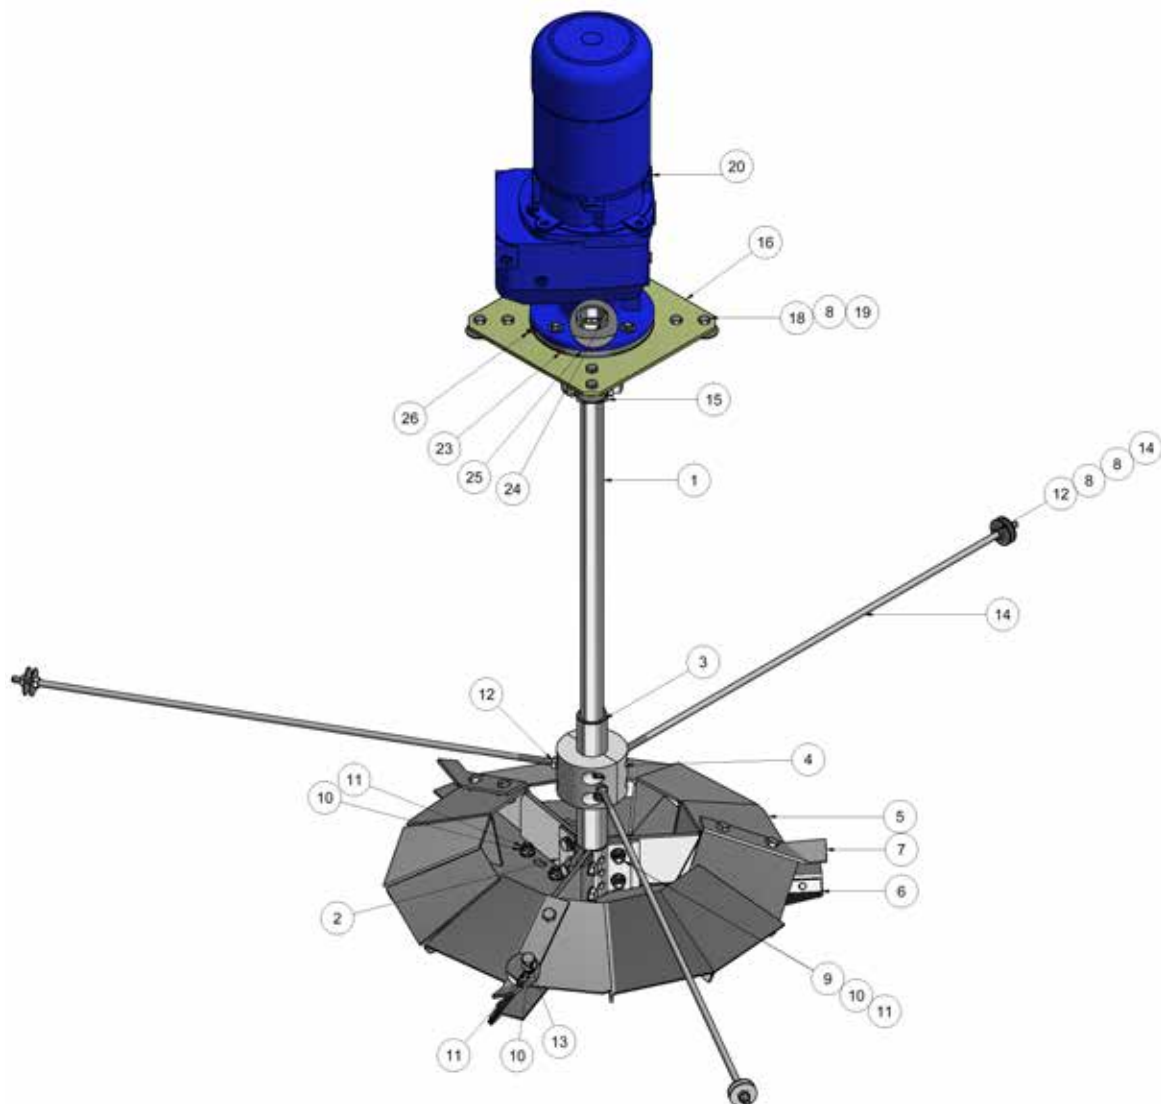

## BILL OF MATERIALS - MIXING TANK 4200 L


BILL OF MATERIALS - MIXING TANK 4200 L, WITHOUT STIRRER			
	Item no.	Description	PCS.
	0340-206	MIXING TANK 4200 L	
1	0140-110	Bottom part for tank vf	1
2	0140-120	Top part for tank vf7	1
3	0140-115	Middle part for tank vf7	1
4	30308035	Set screw m8x35 a2 din 933	90
5	33508013	Nut m8 a2 din 934	108
6	35600058	Nut washer ø8x8,4/24/2 a2 din9021	194
7	0139-710	Bottom agitator vf4-b stains.	6
8	0139-547	Disc ø45/10.5X2 stainless	20
9	30310030	Set screw m10x30 a2 din 933	20
10	33510017	Nut m10 a2 din 934	20
11	0139-505	Load cell kit vf4	3
12	0139-576	Step for mix tank	2
13	0300-216	Ventilation for mixing tanks	1
14	0139-534	Counter agitator vf4-a	2
15	29100001	Thread tape 1 roll = 10 m	1
16	99900099	Grease for acid protection house, gear LF tank	1
17	74520	Flexible water sealer 300ml	1

	Item no.	Description	PCS.
18	29900003	Joint band 6mm, sold in rollsof 8 meters	32
19	0140-040	Aco funki logo label 30x30 cm for LF tank	1
20	0140-028	Bracket for sensor	2
21	0140-026	Safety rfid sensor ip69 5 meter cabel	1
22	0140-027	Safety rfid sensor ip69 key	1
23	0139-495	Inspection flange vf4	1
24	0138-451	Membrane dn40	1
25	0139-496	Inspection cover vf4	1
26	0140-140	Outlet pipe for liquid feeding tank vf7	1
27	0140-064	Pvc ball valve 3"/ø90	1
28	0140-063	Pvc pipe ø90 for 3" valve	1
29	38504020	Hexagon socket screw m4x20 cha2 din912	4
30	30308020	Set screw m8x20 a2 din 933	2
31	33908001	Lock nut m8 a2 din 985	2
32	33904000	Lock nut m4 a2	4
33	0140-036	Cover label 45x45 mm for 0140-035, white	6
34	0140-035	Safety label 35x10 cm for liquidfeeding tank	2



## BILL OF MATERIALS - MIXING TANK 4200 L

	Item no.	Description	PCS.
14	33510017	Nut m10 a2 din 934	9
15	30312030	Set screw m12x30 a2 din 933	6
16	0140-200	Coupling ø30/ø40x118 stainless steel	1
17	0139-999	Tank flange ø200	1
18	35600058	Nut washer ø8x8,4/24/2 a2 din9021	4
19	30310030	Set screw m10x30 a2 din 933	8
20	33900029	Lock nut m10 a2 din 985	8
21	74038093	Gear motor sk32f 100lp/4 230/400	1
22	0140-169	Lid for grease protection of large gear	1
23	0140-168	Bushing for grease protectionof large gear	1
24	0140-167	House for grease for protection of large gear	1
25	9900001	Lubricating nipple m5 coned type a din71412	1
26	30308035	Set screw m8x35 a2 din 933	4
27	35600044	Star washer ø8/8,4 a2 din 6798 a	4

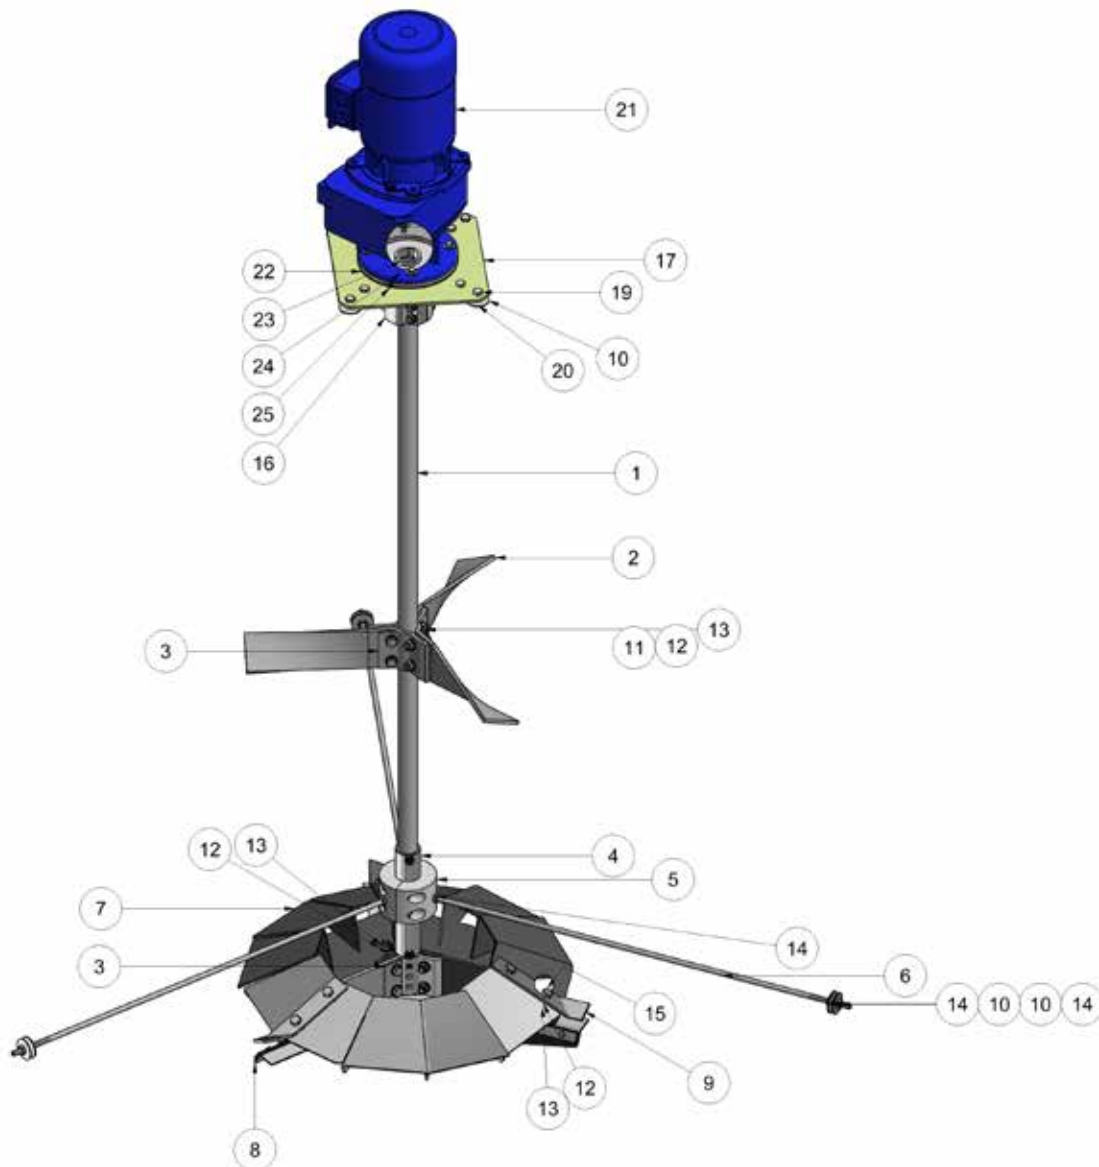



## BILL OF MATERIALS - MIXING TANK 6000 L


BILL OF MATERIALS - MIXING TANK 6000 L, WITHOUT STIRRER			
	Item no.	Description	PCS.
	0340-202	MIXING TANK 6000 L	
1	0140-110	Bottom part for tank vf	1
2	0140-120	Top part for tank vf7	1
3	0140-115	Middle part for tank vf7	2
4	30308035	Set screw m8x35 a2 din 933	135
5	33508013	Nut m8 a2 din 934	153
6	35600058	Nut washer ø8x8,4/24/2 a2 din9021	284
7	0139-710	Bottom agitator vf4-b stainsl.	6
8	0139-547	Disc ø45/10.5X2 stainless	22
9	30310030	Set screw m10x30 a2 din 933	22
10	33510017	Nut m10 a2 din 934	22
11	0139-505	Load cell kit vf4	3
12	0139-576	Step for mix tank	3
13	0300-216	Ventilation for mixing tanks	1
14	0139-534	Counter agitator vf4-a	2
15	29100001	Thread tape 1 roll = 10 m	1
16	99900099	Grease for acid protection house, gear LF tank	1
17	74520	Flexible water sealer 300ml	1

	Item no.	Description	PCS.
18	29900003	Joint band 6mm, sold in rollsof 8 meters	48
19	0140-040	Aco funki logo label 30x30 cm for LF tank	1
20	0140-028	Bracket for sensor	2
21	0140-026	Safety rfid sensor ip69 5 meter cable	1
22	0140-027	Safety rfid sensor ip69 key	1
23	0140-064	Pvc ball valve 3'/ø90	1
24	0140-063	Pvc pipe ø90 for 3' valve	1
25	0139-495	Inspection flange vf4	1
26	0138-451	Membrane dn40	1
27	0139-496	Inspection cover vf4	1
28	0140-140	Outlet pipe for liquid feeding tank vf7	1
29	38504020	Hexagon socket screw m4x20 cha2 din912	4
30	30308020	Set screw m8x20 a2 din 933	2
31	33908001	Lock nut m8 a2 din 985	2
32	33904000	Lock nut m4 a2	4
33	0140-035	Safety label 35x10 cm for liquidfeeding tank	2
34	0140-036	Cover label 45x45 mm for 0140-035, white	6



## BILL OF MATERIALS - MIXING TANK 6000 L

BILL OF MATERIALS - MIXING TANK 6000 L, ONLY STIRRER			
	Item no.	Description	PCS.
	0340-202	MIXING TANK 6000 L	
1	0139-708	Shaft 6100 vf4-b comp. Stainls	1
2	0139-714	Wing for middel tube	6
3	0139-651	Tension pl.F/bot.Agitat.Stainl	9
4	0330-015	Wearing bushing, long	1
5	0330-020	Split bearing bush	1
6	0139-511	Stay bolt f/bottom bear. Vf4	3
7	0139-716	Bottom agitator 1/3 part vf4-b	3
8	0139-869	Paddle for bottom agitator	3
9	0139-717	Wing blade vf4-b	3
10	0139-547	Disc ø45/10.5X2 stainless	14
11	33900029	Lock nut m10 a2 din 985	14
12	30312045	Set screw m12x45 a2 din 933	18
13	35600080	Flat washer ø12x13/24/2,5 a2 din 125 a	48
14	33912000	Lock nut m12 a2 din 985	24
15	33510017	Nut m10 a2 din 934	9
16	30312030	Set screw m12x30 a2 din 933	6
17	0140-200	Coupling ø30/ø40x118 stainless steel	1
18	0139-999	Tank flange ø200	1
19	35600058	Nut washer ø8x8,4/24/2 a2 din9021	4
20	30310030	Set screw m10x30 a2 din 933	8
21	74038093	Gear motor sk32f 100lp/4 230/400	1
22	0140-169	Lid for grease protection of large gear	1
23	0140-168	Bushing for grease protection of large gear	1
24	0140-167	House for grease for protection of large gear	1
25	99000001	Lubricatingnippel m5 coned type a din 71412	1
26	30308035	Set screw m8x35 a2 din 933	4
27	35600044	Star washer ø8/8,4 a2 din 6798 a	4

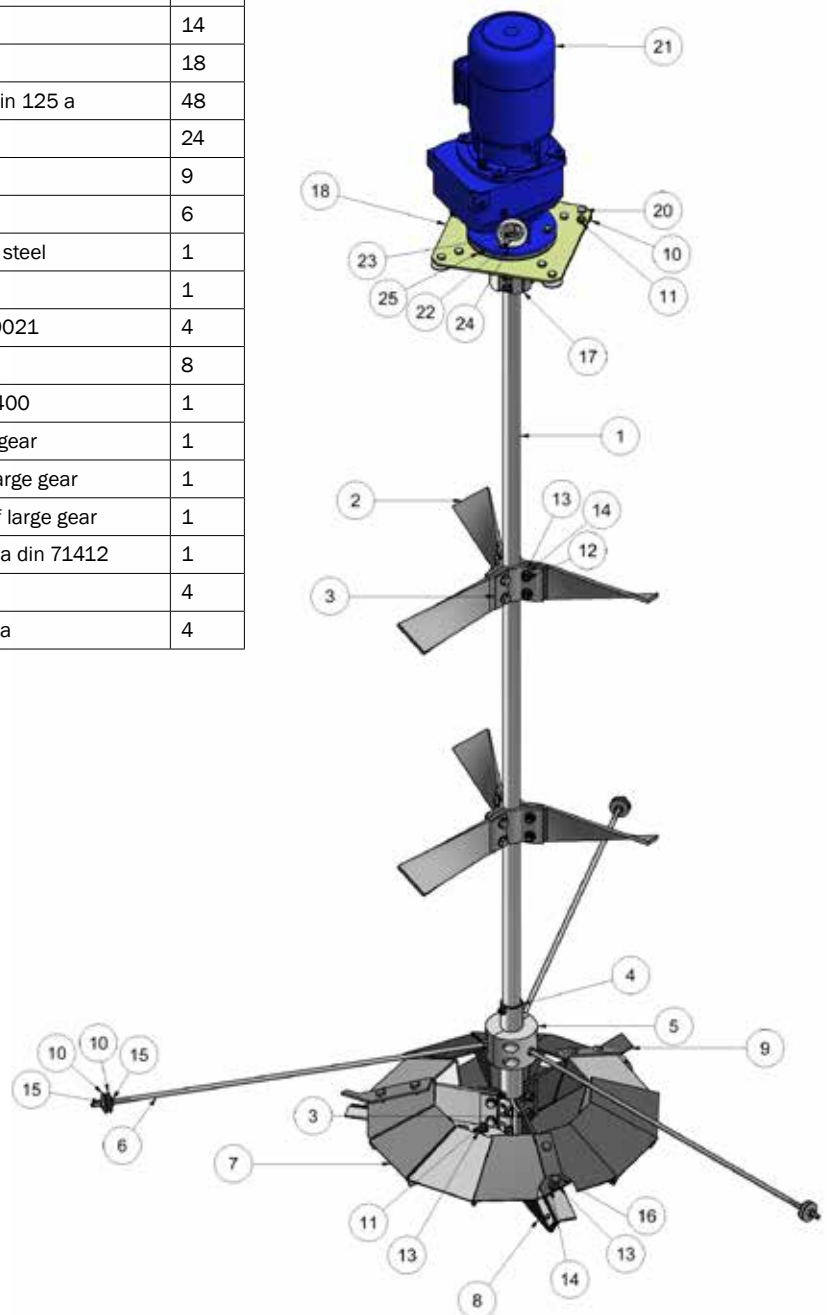




## BILL OF MATERIALS - MIXING TANK 8000 L


BILL OF MATERIALS - MIXING TANK 8000 L, WITHOUT STIRRER			
	Item no.	Description	PCS.
	0340-203	MIXING TANK 8000 L	
1	0140-110	Bottom part for tank vf	1
2	0140-120	Top part for tank vf7	1
3	0140-115	Middle part for tank vf7	3
4	30308035	Set screw m8x35 a2 din 933	180
5	33508013	Nut m8 a2 din 934	198
6	35600058	Nut washer ø8x8,4/24/2 a2 din9021	374
7	0139-710	Bottom agitator vf4-b stainls.	6
8	0139-547	Disc ø45/10.5X2 stainless	26
9	30310030	Set screw m10x30 a2 din 933	26
10	33510017	Nut m10 a2 din 934	26
11	0139-576	Step for mix tank	4
12	0300-216	Ventilation for mixing tanks	1
13	0139-534	Counter agitator vf4-a	3
14	77000011	Load cell 5950, 7500 kg	3
15	0140-785	Spacer 5mm for vf7	9
16	30312055	Set screw m12x55 a2 din 933	12
17	33510019	Nut m12 a2 din 934	12
18	29100001	Thread tape 1 roll = 10 m	1

	Item no.	Description	PCS.
19	99900099	Grease for acid protection house, gear LF tank	1
20	74520	Flexible water sealer 300ml	1
21	29900003	Joint band 6mm, sold in rollsof 8 meters	64
22	0140-040	Aco funki logo label 30x30 cm for LF tank	1
23	0140-064	Pvc ball valve 3"/ø90	1
24	0140-063	Pvc pipe ø90 for 3' valve	1
25	0139-495	Inspection flange vf4	1
26	0138-451	Membrane dn40	1
27	0139-496	Inspection cover vf4	1
28	0140-140	Outlet pipe for liquid feeding tank vf7	1
29	0140-028	Bracket for sensor	2
30	0140-026	Safety rfid sensor ip69 5 meter cabel	1
31	0140-027	Safety rfid sensor ip69 key	1
32	38504020	Hexagon socket screw m4x20 cha2 din912	4
33	30308020	Set screw m8x20 a2 din 933	2
34	33908001	Lock nut m8 a2 din 985	2
35	33904000	Lock nut m4 a2	4
36	0140-036	Cover label 45x45 mm for 0140-035, white	6
37	0140-035	Safety label 35x10 cm for liquidfeeding tank	2

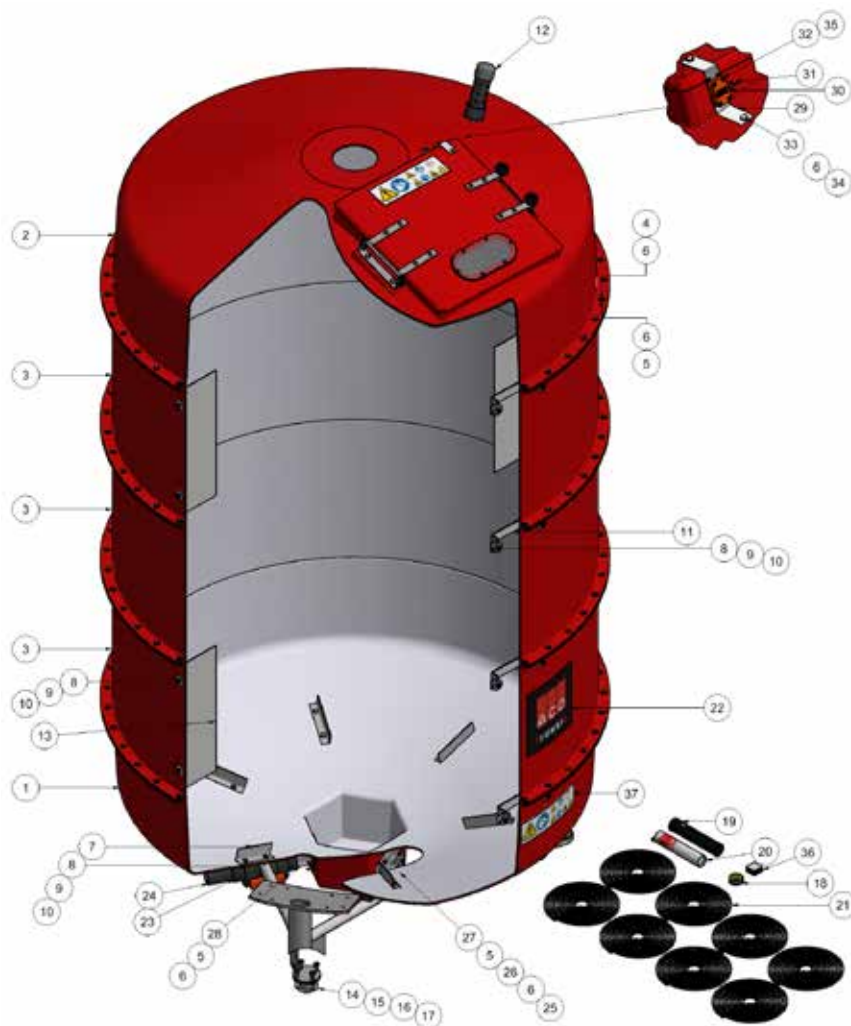

## BILL OF MATERIALS - MIXING TANK 8000 L

BILL OF MATERIALS - MIXING TANK 8000 L, ONLY STIRRER			
	Item no.	Description	PCS.
	0340-203	MIXING TANK 8000 L	
1	0330-006	Shaft 8000 vf4 comp. Stainless	1
2	0139-714	Wing for middel tube	9
3	0139-651	Tension pl.F/bot.Agitat.Stainl	12
4	0330-015	Wearing bushing, long	2
5	0330-020	Split bearing bush	2
6	0139-511	Stay bolt f/bottom bear. Vf4	6
7	0139-716	Bottom agitator 1/3 part vf4-b	3
8	0139-869	Paddle for bottom agitator	3
9	0139-717	Wing blade vf4-b	3
10	0139-547	Disc ø45/10.5X2 stainless	20
11	30312045	Set screw m12x45 a2 din 933	24
12	35600080	Flat washer ø12x13/24/2,5 a2 din 125 a	63
13	33912000	Lock nut m12 a2 din 985	36
14	33510017	Nut m10 a2 din 934	18
15	30312030	Set screw m12x30 a2 din 933	6
16	0140-200	Coupling ø30/ø40x118 stainless steel	1
17	0139-999	Tank flange ø200	1
18	35600058	Nut washer ø8x8,4/24/2 a2 din9021	4
19	30310030	Set screw m10x30 a2 din 933	8
20	33900029	Lock nut m10 a2 din 985	8
21	74038093	Gear motor sk32f 100lp/4 230/400	1
22	0140-169	Lid for grease protection of large gear	1
23	0140-168	Bushing for grease protectionof large gear	1
24	0140-167	House for grease for protection of large gear	1
25	99000001	Lubricatingnippel m5 coned type a din 71412	1
26	30308035	Set screw m8x35 a2 din 933	4
27	35600044	Star washer ø8/8,4 a2 din 6798 a	4

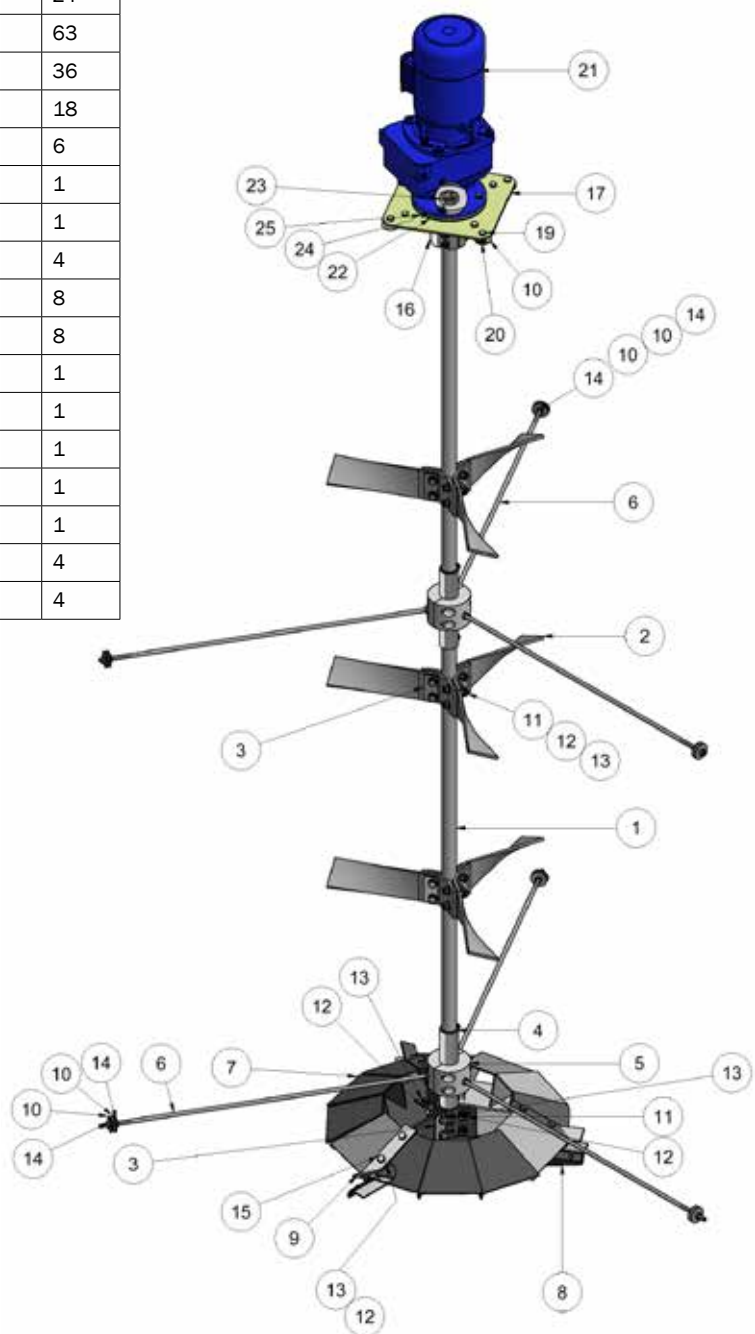


## BILL OF MATERIALS - MIXING TANK 9700 L

### BILL OF MATERIALS - MIXING TANK 9700 L, WITHOUT STIRRER

	Item no.	Description	PCS.
	0340-204	MIXING TANK 9700 L	
1	0140-110	Bottom part for tank vf	1
2	0140-120	Top part for tank vf7	1
3	0140-115	Middle part for tank vf7	4
4	30308035	Set screw m8x35 a2 din 933	225
5	33508013	Nut m8 a2 din 934	243
6	35600058	Nut washer ø8x8,4/24/2 a2 din9021	464
7	0139-710	Bottom agitator vf4-b stains.	6
8	0139-547	Disc ø45/10.5X2 stainless	30
9	30310030	Set screw m10x30 a2 din 933	30
10	33510017	Nut m10 a2 din 934	30
11	0139-576	Step for mix tank	5
12	0300-216	Ventilation for mixing tanks	1
13	0139-534	Counter agitator vf4-a	4
14	0140-785	Spacer 5mm for vf7	9
15	77000011	Load cell 5950, 7500 kg	3
16	30312055	Set screw m12x55 a2 din 933	12
17	33510019	Nut m12 a2 din 934	12
18	29100001	Thread tape 1 roll = 10 m	1

	Item no.	Description	PCS.
19	99900099	Grease for acid protection house, gear LF tank	1
20	74520	Flexible water sealer 300ml	1
21	29900003	Joint band 6mm, sold in rolls of 8 meters	72
22	0140-040	Aco funki logo label 30x30 cm for LF tank	1
23	0139-495	Inspection flange vf4	1
24	0138-451	Membrane dn40	1
25	0139-496	Inspection cover vf4	1
26	0140-140	Outlet pipe for liquid feeding tank vf7	1
27	0140-064	Pvc ball valve 3"/ø90	1
28	0140-063	Pvc pipe ø90 for 3" valve	1
29	0140-028	Bracket for sensor	2
30	0140-026	Safety rfid sensor ip69 5 meter cabel	1
31	0140-027	Safety rfid sensor ip69 key	1
32	38504020	Hexagon socket screw m4x20 cha2 din912	4
33	30308020	Set screw m8x20 a2 din 933	2
34	33908001	Lock nut m8 a2 din 985	2
35	33904000	Lock nut m4 a2	4
36	0140-035	Safety label 35x10 cm for liquid feeding tank	2
37	0140-036	Cover label 45x45 mm for 0140-035, white	6

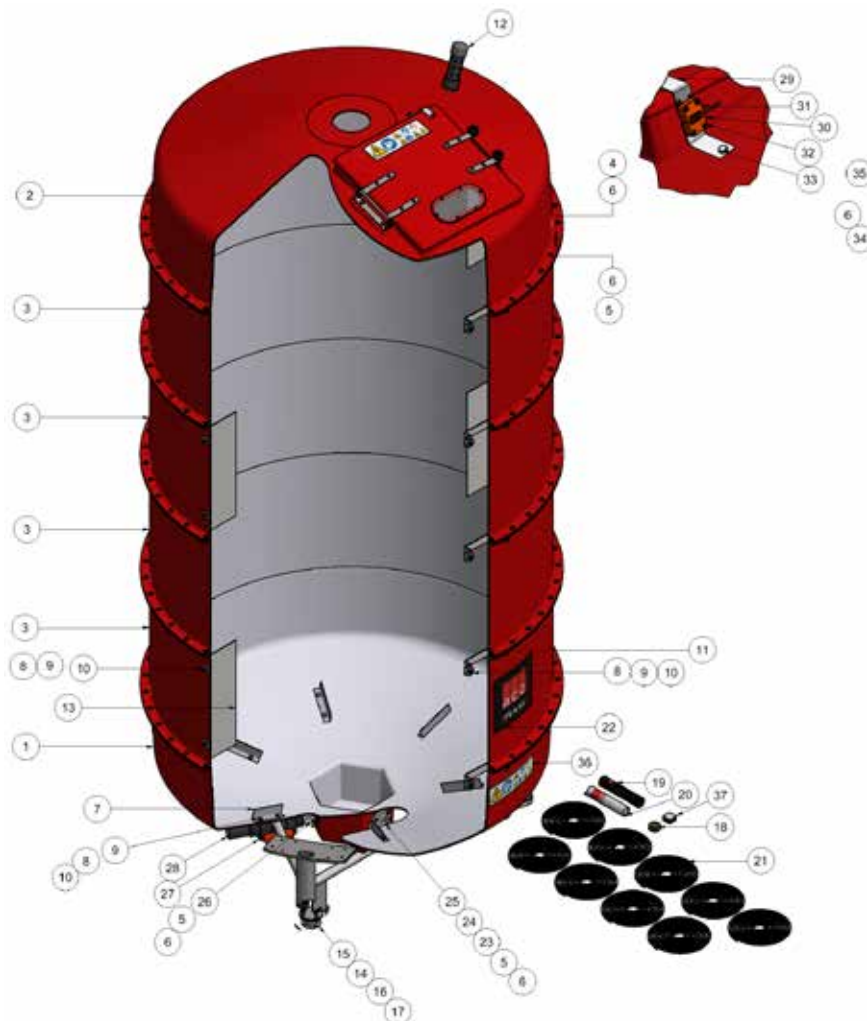

## BILL OF MATERIALS - MIXING TANK 9700 L

BILL OF MATERIALS - MIXING TANK 9700 L, ONLY STIRRER			
	Item no.	Description	PCS.
	0340-204	MIXING TANK 9700 L	
1	0139-552	Coupling ø30x118 stains. Comp	1
2	0330-006	Shaft 8000 vf4 comp. Stainless	1
3	0139-714	Wing for middel tube	12
4	0139-651	Tension pl.F/bot.Agitat.Stainl	15
5	0330-015	Wearing bushing, long	2
6	0330-020	Split bearing bush	2
7	0139-716	Bottom agitator 1/3 part vf4-b	3
8	0139-869	Paddle for bottom agitator	3
9	0139-717	Wing blade vf4-b	3
10	0139-547	Disc ø45/10.5X2 stainless	20
11	30312045	Set screw m12x45 a2 din 933	30
12	35600080	Flat washer ø12x13/24/2,5 a2 din 125 a	72
13	33912000	Lock nut m12 a2 din 985	42
14	33510017	Nut m10 a2 din 934	18

	Item no.	Description	PCS.
15	30312030	Set screw m12x30 a2 din 933	6
16	0330-044	Shaft extension stainless steel	1
17	0139-511	Stay bolt f/bottom bear. Vf4	6
18	0140-200	Coupling ø30/ø40x118 stainless steel	1
19	0139-999	Tank flange ø200	1
20	35600058	Nut washer ø8x8,4/24/2 a2 din9021	4
21	30310030	Set screw m10x30 a2 din 933	8
22	33900029	Lock nut m10 a2 din 985	8
23	74038093	Gear motor sk32f 100lp/4 230/400	1
24	0140-169	Lid for grease protection of large gear	1
25	0140-168	Bushing for grease protectionof large gear	1
26	0140-167	House for grease for protection of large gear	1
27	99000001	Lubricating nipple m5 coned type a din 71412	1
28	30308035	Set screw m8x35 a2 din 933	4
29	35600044	Star washer ø8/8,4 a2 din 6798 a	4

