



FARROW COMFORT



DANISH DESIGN | GERMAN QUALITY | GLOBAL EXPERIENCE

FOR LOOSE SOWS, BETTER WELFARE

Sow trough and piglet nest are close to the aisle

FarrowComfort is a farrowing pen for loose sows, where a sow trough is located in the immediate vicinity of the aisle. The piglet nest is also located close to the aisle, which makes it easy to access both the sow and the piglets.

Good space for a sow

The pen is spacious and provides plenty of space inside, which is crucial for both the sow's comfort and for ease of handling the animals.

Good overview from the aisle

An important aspect of FarrowComfort's design is the easy observation from the hallway. It is easy to see if the sow needs birthing assistance. To further improve the overview, there is a lowered area at the sow's rear.



Easy to move a sow in and out

A particular focus in the design is the gate, which fits tightly to the sides and to the floor. This gate is designed so that it can be opened to both sides or removed completely, which allows the sow to enter and exit from both directions.

Tight-fitting rear gate

The tightly-fitting rear gate means there are no drafts in the piglet nest, and this is essential for maintaining a stable and comfortable environment for piglets.

Flexible farrowing wings

The design includes adjustable farrowing wings. This allows further customization and ensures that the pen can be individually adapted to each sow, maximizing both safety and comfort. The fixing width of the farrowing wings can be adjusted, making it possible to adapt the pen to different sizes of sows.



Advantages

- 1 Farrowing pen with plenty of space for sow and piglets
- 2 Sow trough and piglet nest close to the aisle
- 3 Close-fitting door, no drafts
- 4 Flexible adjustable farrowing wings
- 5 Easy to get a sow in and out of the pen
- 6 Easy to fix a sow with special design of farrowing wings
- 7 Good overview from the aisle
- 8 Easy to get the piglets out of the pen at weaning

Emptying the trough

It is easy to empty the trough from the aisle by simply pulling the open/close shutter.



Open



Close



Changing position


Using the flexible farrowing wings, you can make plenty of space for the entry and exit of piglets. It makes moving the piglets out of the pen easy during weaning.



Would you like to learn more about the FarrowComfort farrowing pen?



OUR MODELS

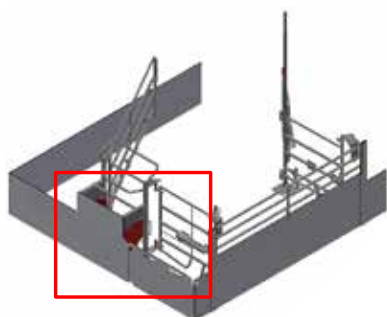


A - Straight Trough

Equalized farrowing pens during fixation



B - Corner Trough

Very diagonally positioned farrowing pens during fixation

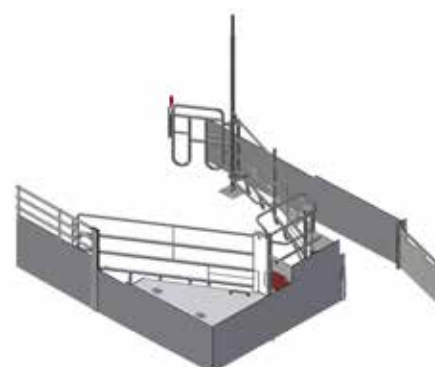

C - Straight Trough








Diagonally positioned farrowing pens during fixation

DIMENSIONS

Optimal utilization of FarrowComfort

DIFFERENT SOLUTIONS WITH FARROW-COMFORT

	Dimensions, cm	Diameter, cm	Surface, m ²	Available sow space, m ²	Available sow space, %
A	240x270	175 (160)	6,48	3,8	59%
	250x270	180 (160)	6,75	4,0	59%
	260x270	185 (160)	7,02	4,3	61%
B	240x270	180	6,48	4,1	62%
	250x270	185	6,75	4,3	62%
	260x270	190	7,02	4,4	63%
C	240x270	175	6,48	3,4	52%
	250x270	180	6,75	3,5	52%
	260x270	185	7,02	3,7	53%

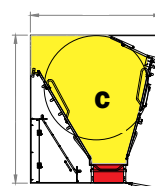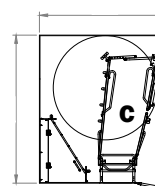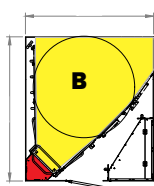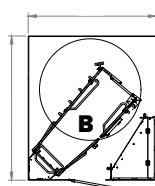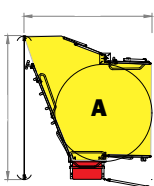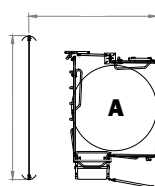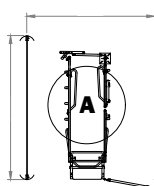



DANISH DESIGN | GERMAN QUALITY | GLOBAL EXPERIENCE